


Lifestyler[®] **SYSTEM 300**[™]

SEARS[®]

Model No. 831.159421

Serial No. _____

Write the serial number in the space above for reference.

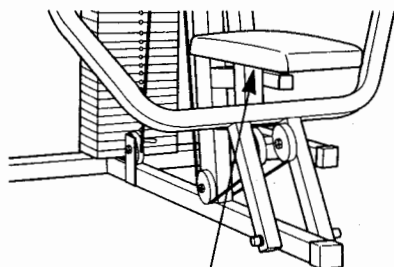


Serial Number Decal (Under Seat)

CAUTION!

Read all safety precautions and instructions in this owner's manual before using this equipment. Save this owner's manual for future reference.

PATENT PENDING

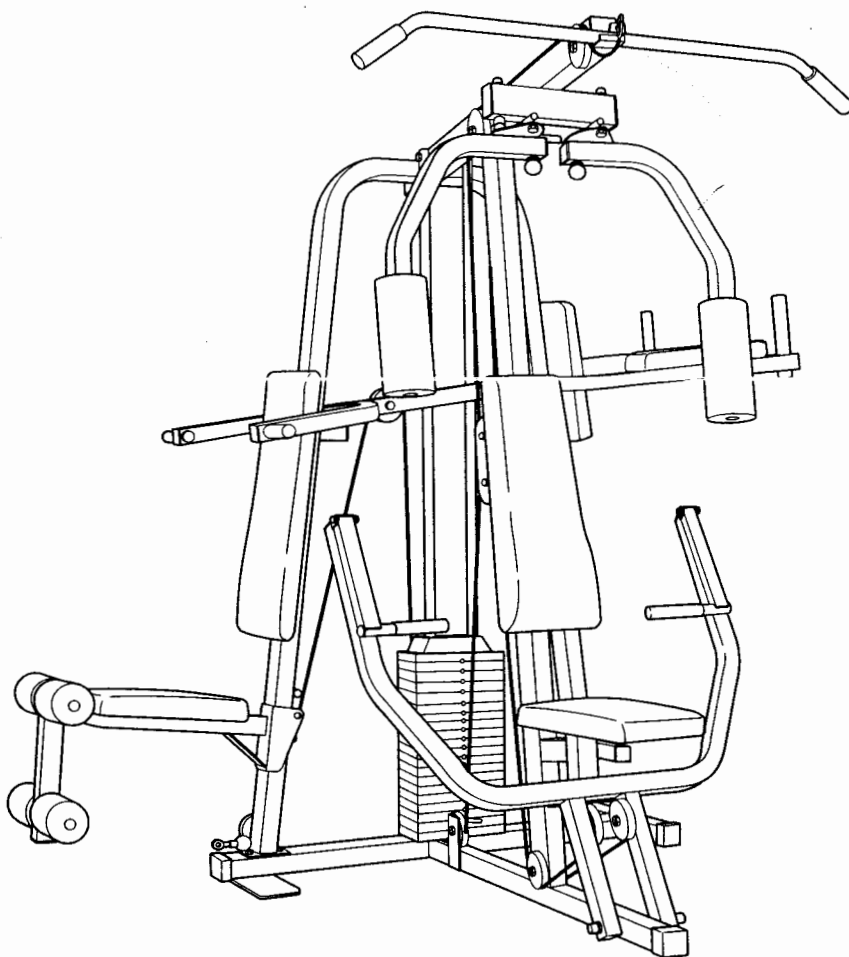

OWNER'S MANUAL

SEARS, ROEBUCK AND CO., HOFFMAN ESTATES, IL 60179

TABLE OF CONTENTS

IMPORTANT SAFETY PRECAUTIONS	2
BEFORE YOU BEGIN	3
ASSEMBLY	4
USING THE SYSTEM 300	18
WEIGHT RESISTANCE CHART	20
TROUBLE-SHOOTING AND MAINTENANCE	21
CABLE DIAGRAMS	22
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

Note: A PART IDENTIFICATION CHART and an EXPLODED DRAWING have been attached to the center of this owner's manual. Remove them before beginning assembly.

IMPORTANT SAFETY PRECAUTIONS

WARNING: To reduce the risk of serious injury, read the following important safety precautions before using the SYSTEM 300.

1. Read all instructions in this owner's manual and in the accompanying literature before using the SYSTEM 300.
2. Use the SYSTEM 300 only on a level surface. Cover the floor underneath the SYSTEM 300 to protect it.
3. Inspect and tighten all parts each time you use the SYSTEM 300. Replace any worn or frayed parts immediately.
4. Keep small children away from the SYSTEM 300 at all times.
5. The SYSTEM 300 is designed to be used by only one person at a time.
6. Keep hands and feet away from moving parts.
7. Always wear athletic shoes for foot protection.
8. Make sure that the cables remain on the pulleys at all times. If the cables bind as you are exercising, stop immediately and make sure that the cables are on all of the pulleys.
9. Remove the lat bar from the high pulley station when performing any exercise that does not use the lat bar.
10. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.
11. When using the butterfly arms, always apply equal pressure to both arms. Never attempt to use the arms separately. Doing so could permanently damage the SYSTEM 300.

WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. SEARS assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

BEFORE YOU BEGIN

Thank you for selecting the SEARS® LIFESTYLER SYSTEM 300 Weight System. The versatile SYSTEM 300 features an impressive array of weight stations designed to develop every major muscle group of the body. Whether your goal is a shapely figure, dramatic muscle size and strength, or a healthier cardiovascular system, the SYSTEM 300 will help you to achieve the specific results you want.


For your safety and benefit, read this manual carefully before using the SYSTEM 300. If you have additional questions, please call our Customer Service

Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is 831.159421. The serial number can be found on a decal attached to the SYSTEM 300 (see the front cover of this owner's manual).

Before reading further, please look at the drawing below and familiarize yourself with the parts that are labeled.

Assembled Dimensions:

Height: 80 inches
Width: 77 inches
Length: 64 inches

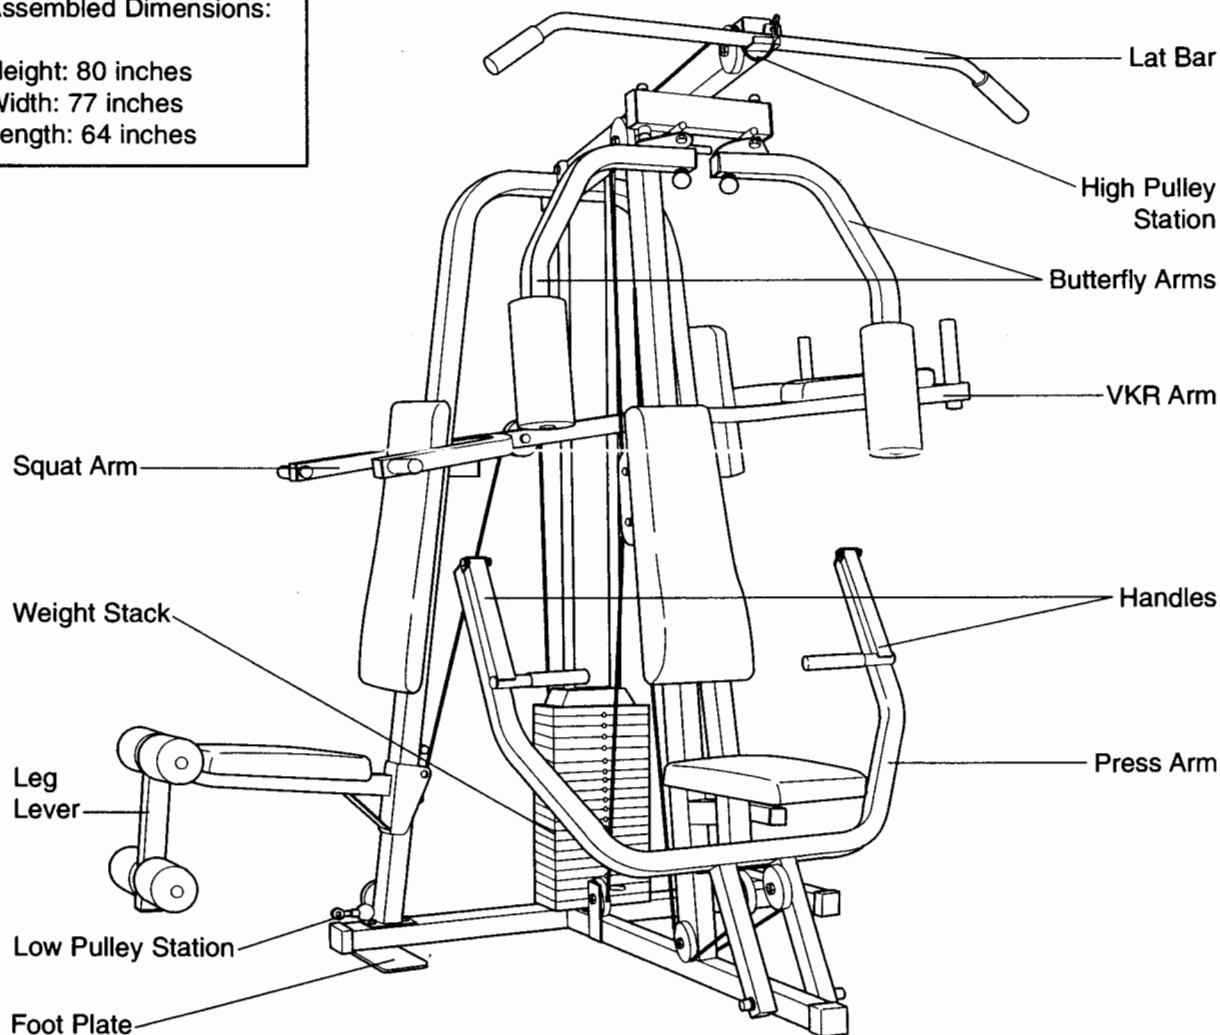

ASSEMBLY

Assembly requires two people. Due to the size and weight of the SYSTEM 300, assemble it in the location where it will be used.

Place all parts of the SYSTEM 300 in a cleared area and remove the packing materials; do not dispose of the packing materials until assembly is completed. Before beginning, read each assembly step and look at each drawing carefully. As you assemble the SYSTEM 300, make sure that all parts are oriented exactly as shown in the drawings. Tighten all parts as you attach them, unless instructed to do otherwise. For help identifying small parts, refer to the

PART IDENTIFICATION CHART attached to the center of this owner's manual.

THE FOLLOWING TOOLS (NOT INCLUDED) ARE REQUIRED FOR ASSEMBLY: Two adjustable wrenches, a phillips screwdriver, a flat screwdriver and a rubber mallet. Lubricant, such as grease or petroleum jelly, and a small amount of soapy water are also required.

To simplify assembly, the following tools are recommended: A socket set, open or closed wrenches, or ratchet wrenches.

1. Tap a 2" Outer Cap (15) onto the Base (43).

Tap two 2" Outer Caps (15) onto the Stabilizer (69). Tap a 2" x 2" Inner Cap (78) into the Stabilizer.


Attach the Stabilizer (69) to the Base (43) with two 3/8" x 2 1/2" Bolts (3), two 3/8" Washers (4), and two 3/8" Jam Nuts (2).

Do not fully tighten the Jam Nuts yet.

2. Insert six 3/8" x 2 3/4" Carriage Bolts (1) up through the holes in the Stabilizer (69) and the Base (43).

Attach the VKR Upright (70) to the two indicated 3/8" x 2 3/4" Carriage Bolts (1) in the Stabilizer (69) with two 3/8" Jam Nuts (2).


Do not fully tighten the Jam Nuts yet.

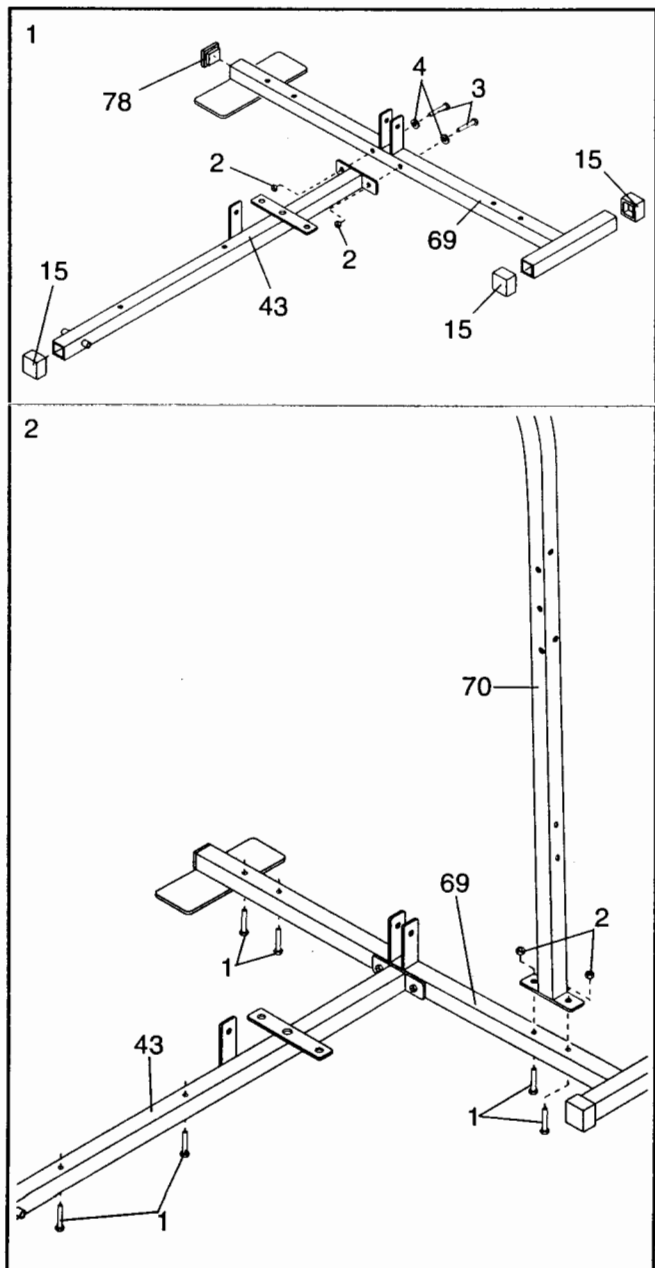

3. Attach the Squat Upright (71) to the two indicated $3/8"$ x $2 3/4"$ Carriage Bolts (1) in the Stabilizer (69) with two $3/8"$ Jam Nuts (2).

Do not fully tighten the Jam Nuts yet.

Tap a 2" x 2" Inner Cap (78) into the Squat Upright (71). Attach a Rubber Bumper (20) to the Squat Upright with a #8 x $1/2"$ Tap Screw (21).

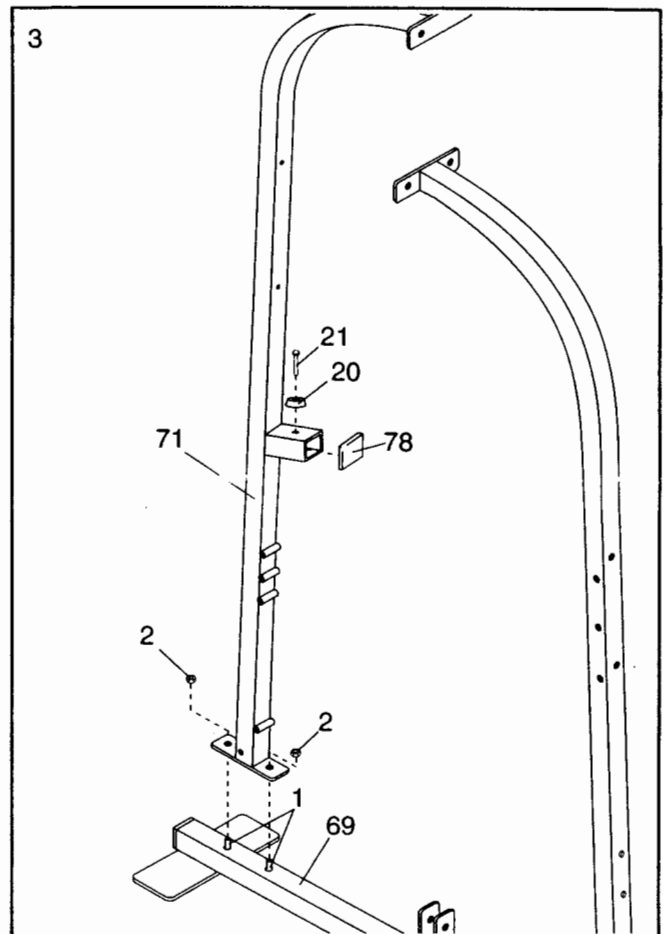


4. Insert two Weight Bushings (104) into each of the nineteen Weights (46).

Slide two Weight Bumpers (47) onto the lower end of each Weight Guide (51) (there is a hole near the upper end of each Weight Guide). Insert the Weight Guides into the holes in the indicated bracket on the Base (43).

Slide the Weights (46) onto the Weight Guides (51). Turn the Weights so that the deep pin grooves are underneath the Weights, and are on the indicated side.

Slide the Small Weight (103) onto the Weight Guides (51). Insert the Weight Selector (48) into the Weights (46).

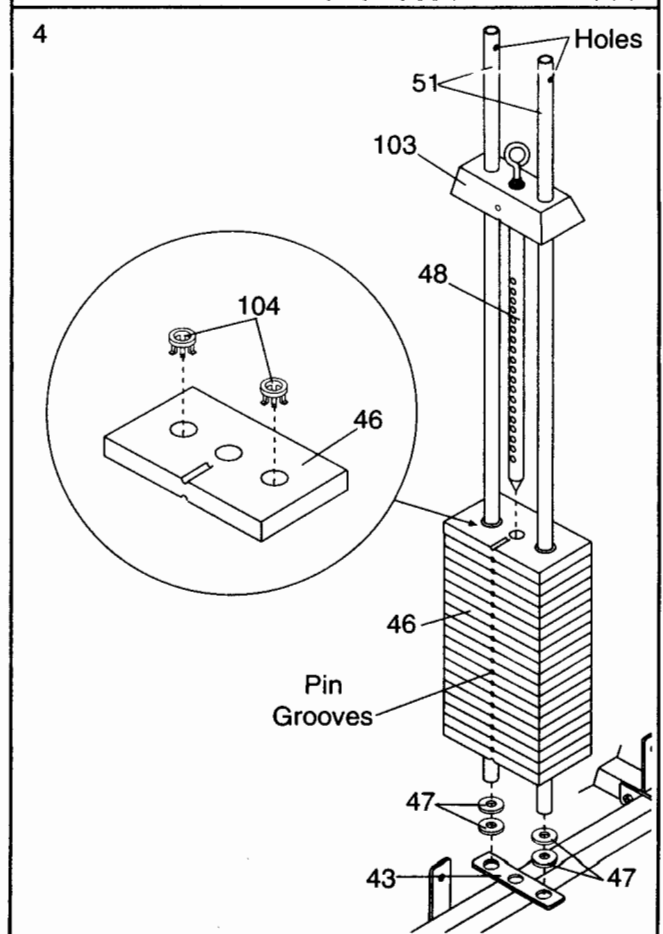


5. Attach the Frame (80) to the two 3/8" x 2 3/4" Carriage Bolts (1) in the Base (43) with two 3/8" Jam Nuts (2).


Do not fully tighten the Jam Nuts yet.

Insert the Frame Cap (88) into the indicated end of the Frame (80). Attach the Frame Cap, the VKR Upright (70), and the Squat Upright (71) to the Frame with the two 3/8" x 3" Bolts (7) and two 3/8" Jam Nuts (2).

Tighten all of the 3/8" Jam Nuts (2) used in assembly steps 1 through 5.

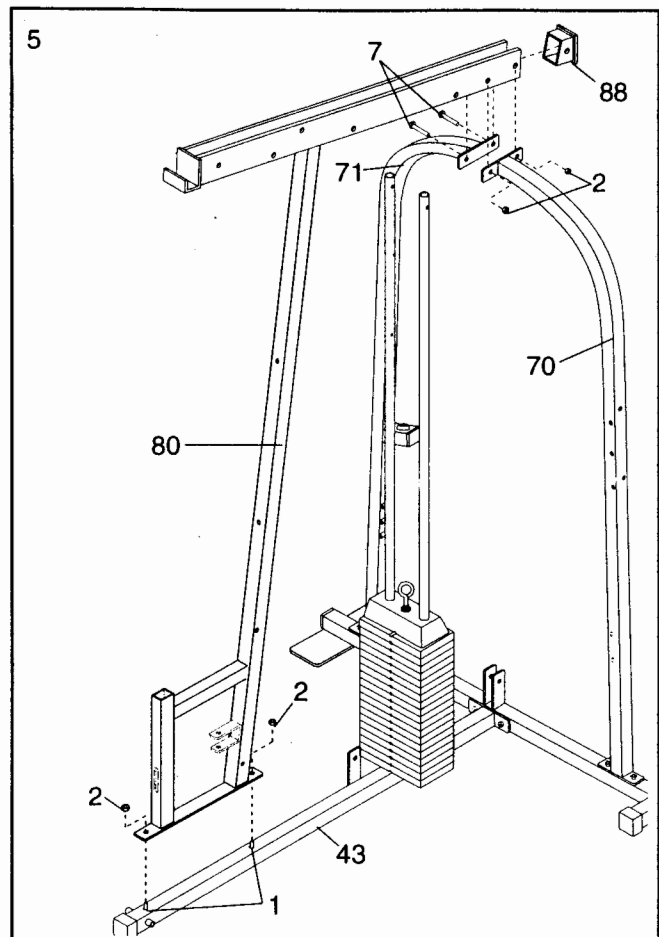


6. Attach the upper ends of the Weight Guides (51) to the Frame (80) with the 5/16" x 6 1/2" Bolt (79), the two 1/2" x 3/4" Spacers (100), four 5/16" Flat Washers (60), and the 5/16" Jam Nut (106), as shown.

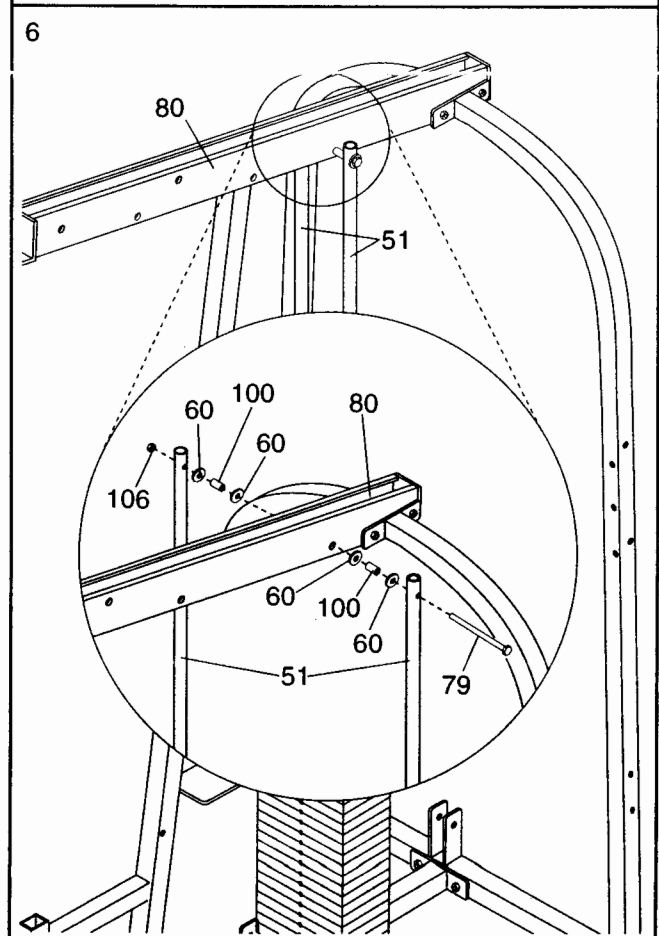

7. Tap a 1 1/2" x 3" Inner Cap (101) into each side of the Butterfly Arm Frame (42).


Attach the Butterfly Arm Frame (42) to the Frame (80) with a 3/8" x 3 1/4" Bolt (5) and a 3/8" Jam Nut (2).

Do not fully tighten the Jam Nut yet.

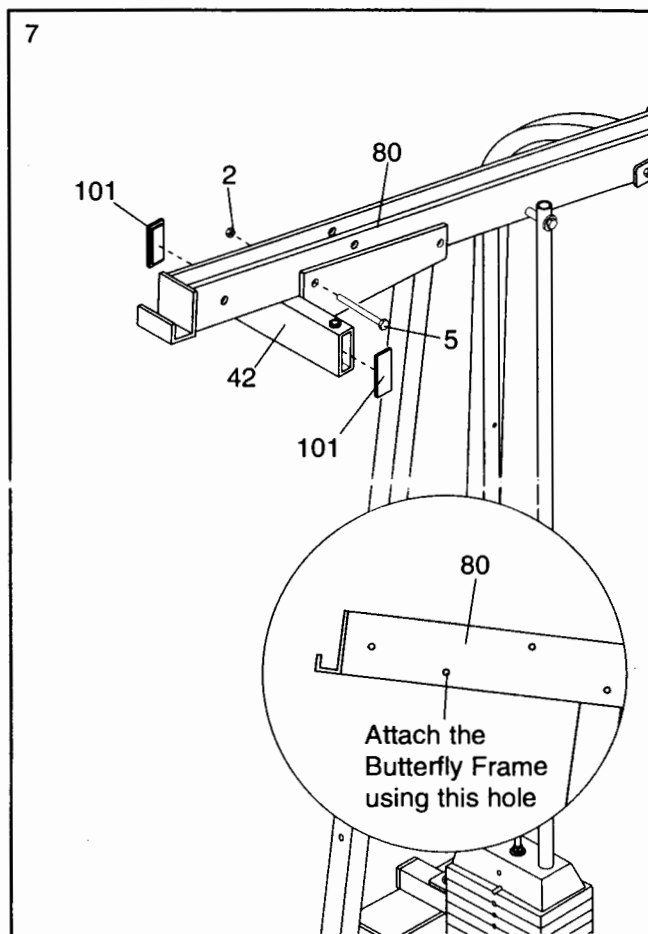


8. Tap a 2" x 2" Inner Cap (78) into each end of the Foot Rest (77).

Attach the Foot Rest (77) to the VKR Upright (70) with two 3/8" x 2 3/4" Bolts (81), two 3/8" Flat Washers (4), and two 3/8" Jam Nuts (2).

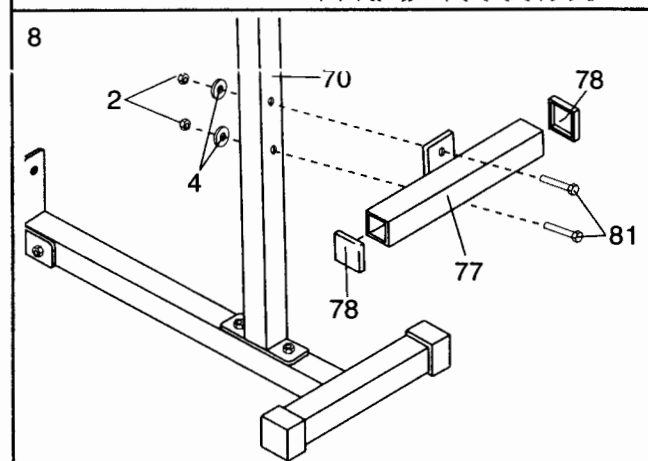

9. Insert the end of the Pivot Arm (91) with the Pulley (12) up into the indicated opening in the Frame (80).

Attach the Pivot Arm (91) and two 3/8" Spacers (99) inside the Frame (80) with a 3/8" x 2 3/4" Bolt (81), two 3/8" Flat Washers (4), and a 3/8" Jam Nut (2).

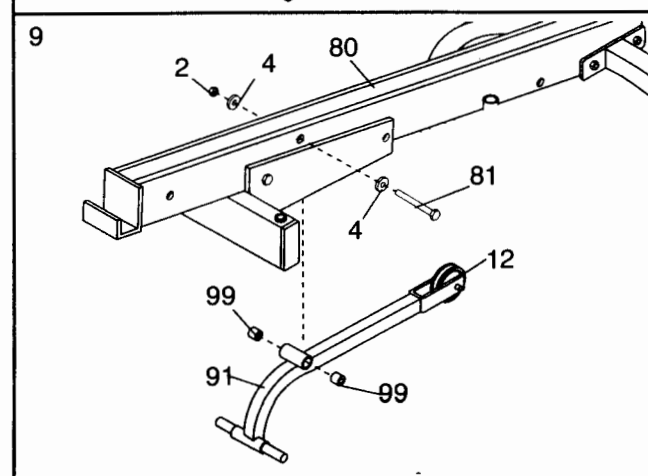


10. **Make sure that there are two 3/4" Flange Bushings (18) in the indicated side of the Butterfly Arm Frame (42).**

Tap two 1 3/4" x 1 3/4" Inner Caps (24) into the left Butterfly Arm (30) as shown.

Slide an Adjustment Bracket (32) onto the axle on one of the Butterfly Arms (30). Turn the Adjustment Bracket so the small hole is on the side shown. **Make sure that there is a 3/4" Flange Bushing (18) in the Adjustment Bracket, and that the flange of the Bushing is on top.** Apply lubricant to the axle on the Butterfly Arm. Insert the axle into the indicated hole in Butterfly Arm Frame (42). Tap two 3/4" Retainers (17) and a 3/4" Retainer Cap (19) onto the end of the axle. **Note: The teeth on the Retainers must bend toward the Retainer Cap.**


Assemble the other Butterfly Arm (30) and Adjustment Bracket (32) in the same manner.

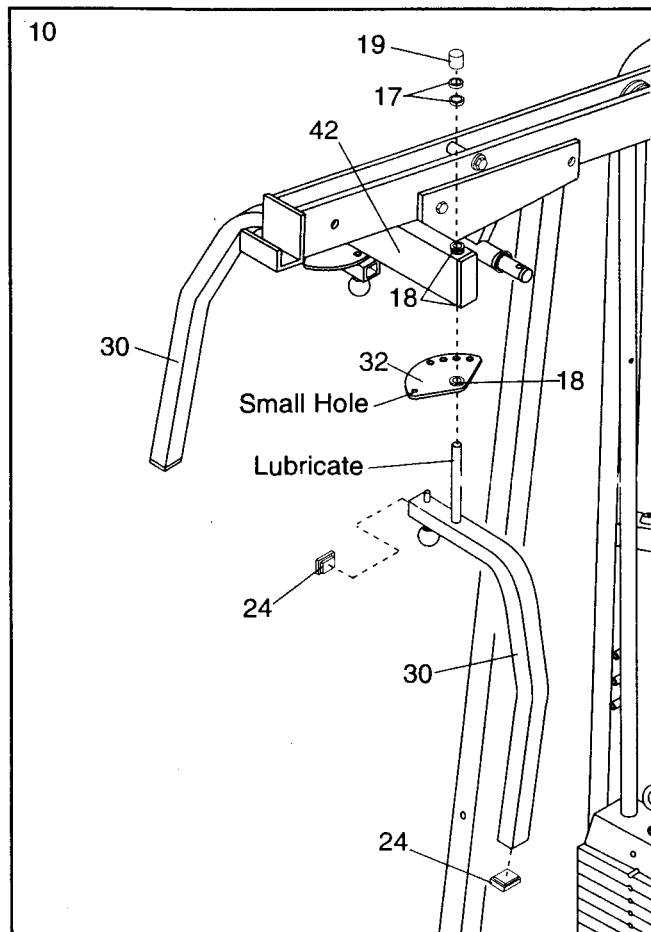


11. Attach the bent end of a Link Arm (33) to the small hole in one of the Adjustment Brackets (32) with a 3/8" x 1" Bolt (6), a 3/8" Plastic Washer (34), and a 3/8" Nylon Locknut (27) as shown.

Attach the other end of the Link Arm (33) to the Pivot Arm Tube (92) with a 1/4" x 1 1/4" Bolt (93) and a 1/4" Nylon Locknut (68).

Attach the other Link Arm (not shown) in the same Manner.

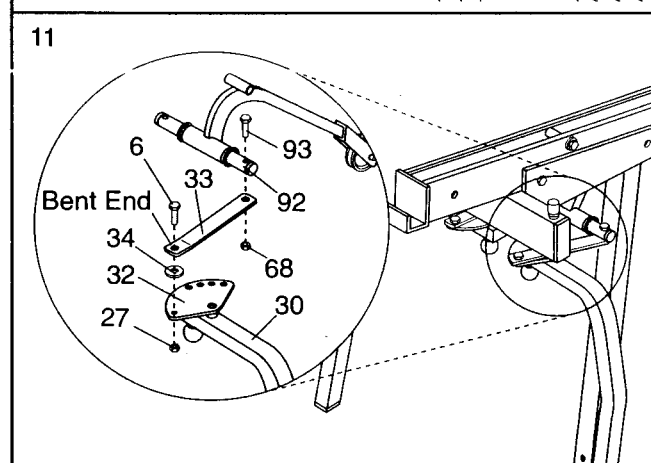


12. Wet the lower ends of both Butterfly Arms (30) and the insides of the two 9 1/2" Foam Pads (29) with soapy water. Slide a 9 1/2" Foam Pad onto each Butterfly Arm.

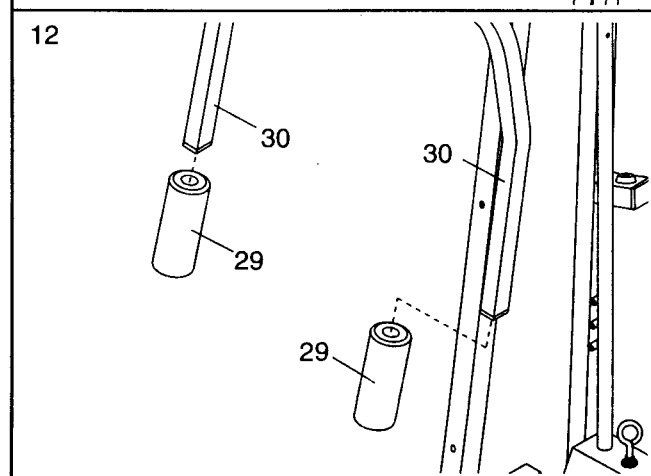


13. Tap two 1 3/4" Inner Caps (24) into the Squat Arm (72).

Tap two 1" Round Caps (22) into the Squat Arm (72).

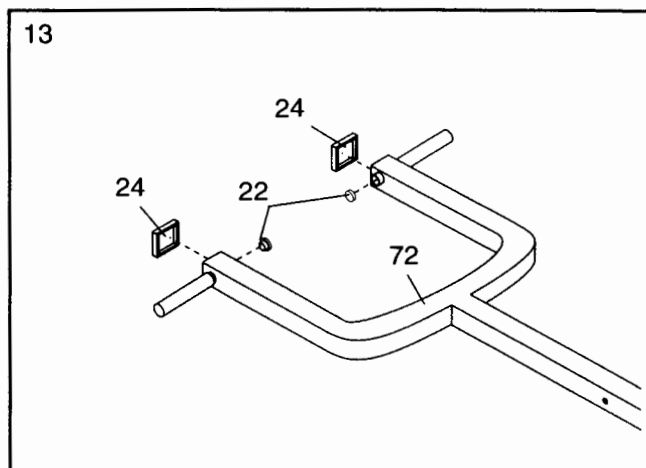

14. Attach the Squat Arm (72) to the VKR Upright (70) with a 3/8" x 3 1/4" Bolt (5) and a 3/8" Jam Nut (2). **Do not overtighten the Jam Nut; the Squat Arm must pivot freely.**

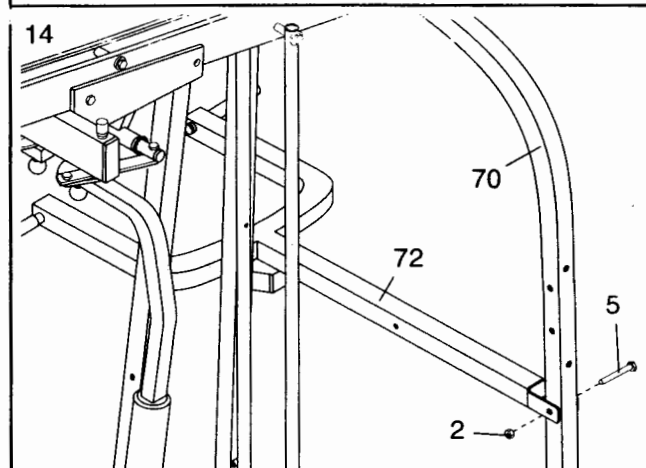


15. Tap two 1 3/4" x 1 3/4" Inner Caps (24) into the upper end of the Press Arm (28).

Attach a Rubber Bumper (20) to the Press Arm (28) with a #8 x 1/2" Tap Screw (21).

Make sure that there are two 3/4" Flange Bushings (18) in the indicated holes in the Base (43). Make sure that there are two 3/4" Flange Bushings (18) in the indicated holes in the Press Arm (28).

Apply lubricant to the 3/4" x 8 1/2" Axle (16). Align the bottom of the Press Arm (28) with the Base (43). Slide the Axle into the Press Arm and Base. Tap a 3/4" Retainer (17) and a 3/4" Retainer Cap (19) onto each end of the Axle. **Note: The teeth on the Retainers must bend toward the Retainer Cap.**

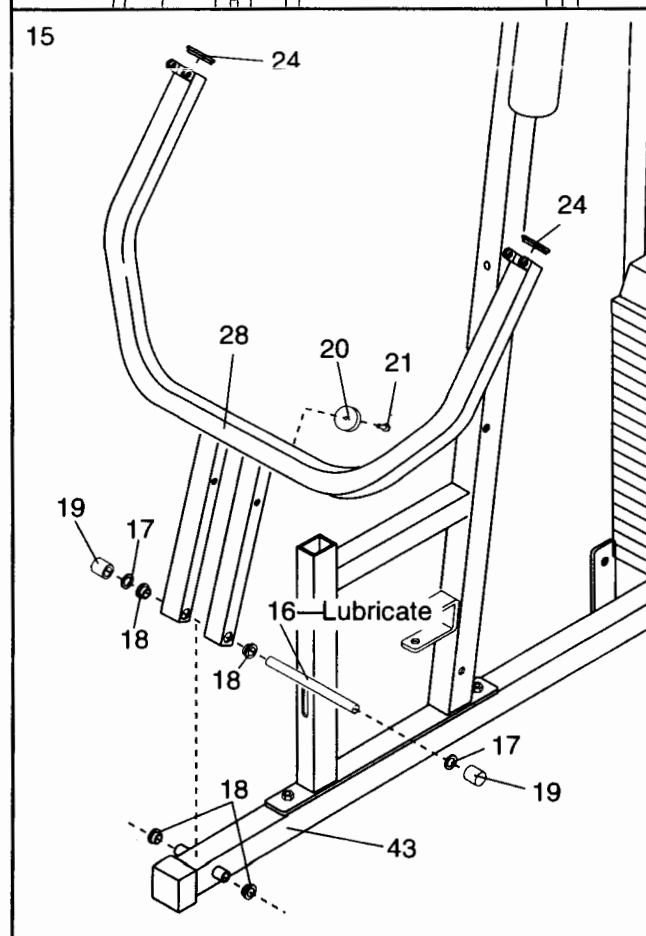


16. Tap a 1" x 1 1/2" Inner Cap (23) into a Handle (26). Tap a 1" Round Cap (22) into the Handle.


Apply lubricant to a 3/8" x 2 1/2" Bolt (3). Attach the Handle (26) to the Press Arm (28) with the Bolt and a 3/8" Jam Nut (2).

Remove the adhesive backing on a Square Bumper (9). Apply the Bumper to the Handle (26) in the indicated location.

Assemble the other Handle (26) to the Press Arm (28) in the same manner.

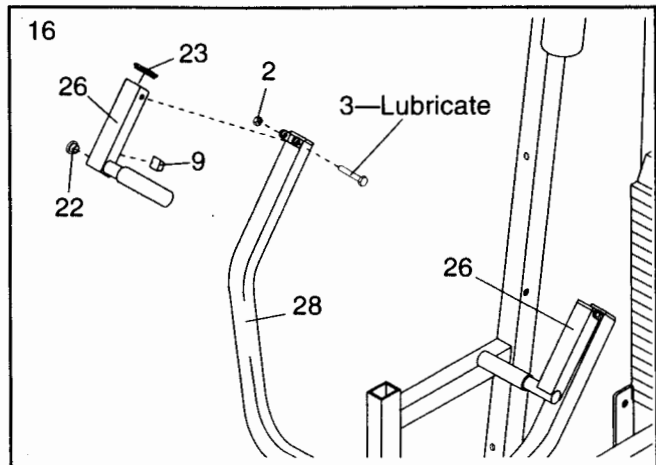


17. Find the end of the Short Cable (44) where the rubber stop is located. Lay the end of the Cable over a 3 1/2" Pulley (12). Attach the Pulley to the Frame (80) with a 3/8" x 3 3/4" Bolt (83), a 3/8" Flat Washer (4), and a 3/8" Jam Nut (2). **Note: Be sure that the Short Cable is between the Pulley and the lat bar bracket.**

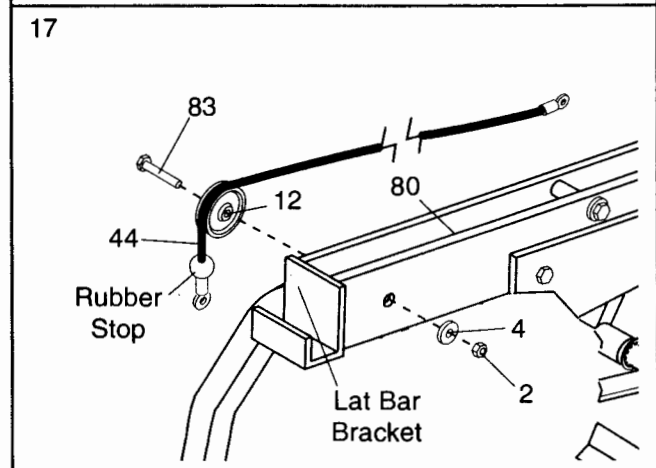


18. Lay the Short Cable (44) over a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the Frame (80) with the 3/8" x 4 1/2" Bolt (90) and a 3/8" Jam Nut (2). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

Tighten the 3/8" Jam Nut (2) used in assembly step 7.

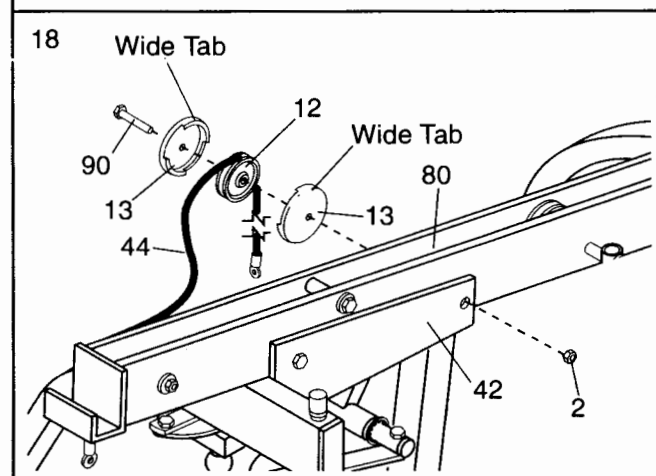


19. Assemble the two 4 1/2" Pulley Covers (87), the two "I" Plates (86), and the two 4 1/2" Pulleys (85) with the two 3/8" x 1 3/4" Bolts (14) and two 3/8" Jam Nuts (2).

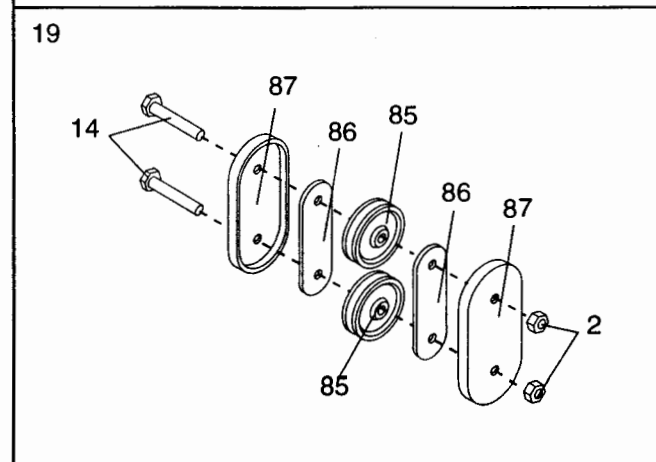


20. Feed the Short Cable (44) around one of the 4 1/2" Pulleys (85).

Feed the Short Cable (44) up over the 3 1/2" Pulley (12) in the Pivot Arm (91) as shown.

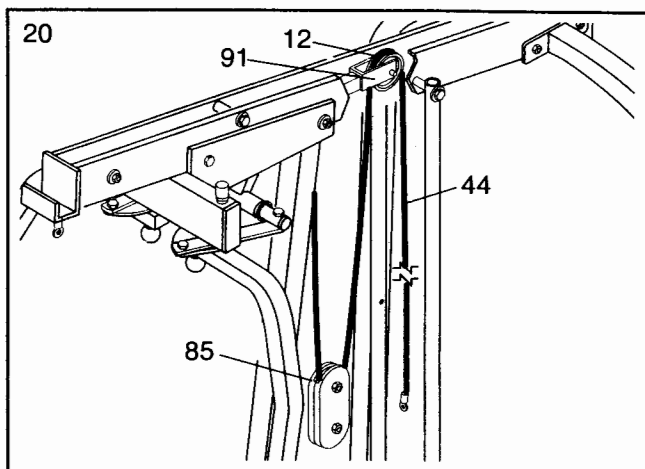


21. Attach the Short Chain (52) between the Short Cable (44) and the 3/8" Eyebolt (55) in the Small Weight Cover (54) with two Cable Clips (53).

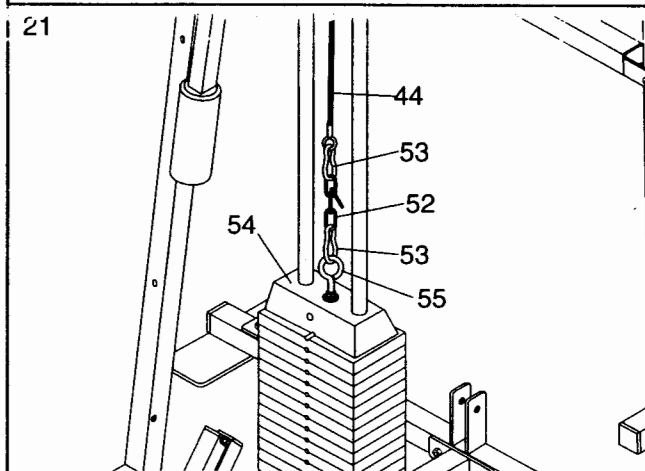


22. Attach a 3/8" x 3 3/4" Bolt (83), two 3/8" Washers (4), the 1/2" x 1 1/4" Spacer (84), and a 3/8" Jam Nut (2) to the lower hole in the Squat Upright (71).


Find the end of the Long Cable (45) where the rubber ball is located. Route the Long Cable up around a 3 1/2" Pulley (12). Attach the Pulley to the indicated side of the Squat Upright (71) with a 3/8" x 3 1/2" Bolt (82), a 3/8" Flat Washer (4), and a 3/8" Jam Nut (2). **Note: Make sure that the Long Cable is between the Pulley and the 1/2" x 1 1/4" Spacer (84).**

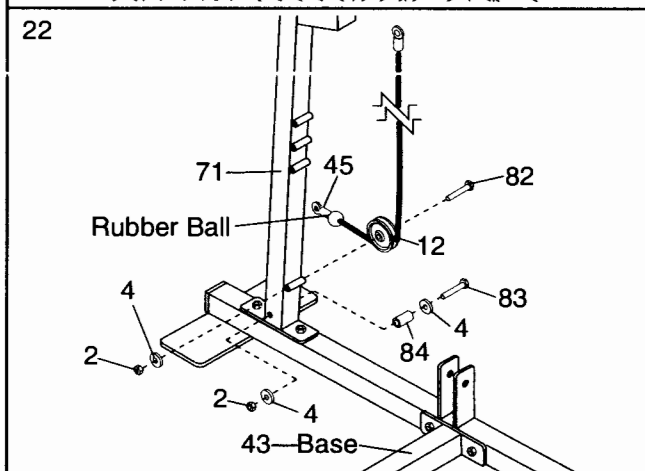

23. Lay the Long Cable (45) over a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the Squat Arm (72) with a 3/8" x 3 1/4" Bolt (5) and a 3/8" Jam Nut (2). Make sure that the Pulley is attached to the indicated side of the Squat Arm. **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

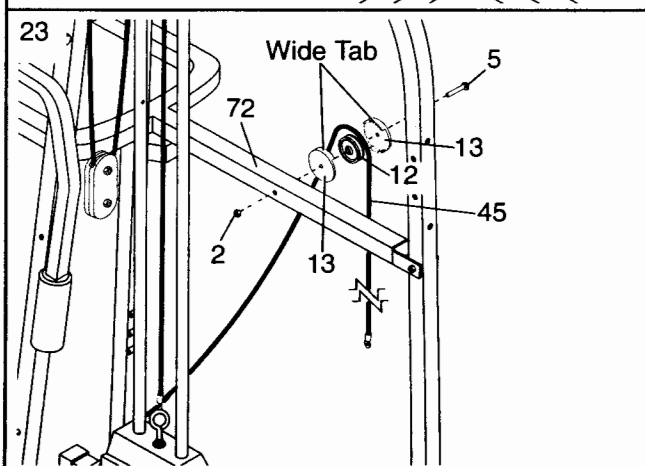


24. Route the Long Cable (45) under a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the "U" bracket on the Stabilizer (69) with the 3/8" x 2" Bolt (38) and a 3/8" Jam Nut (2). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

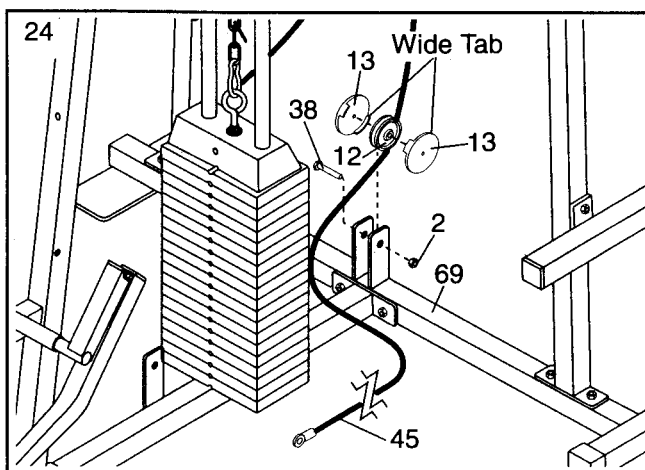


25. Feed the Long Cable (45) under the Weights (46).

Route the Long Cable (45) under a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the bracket on the Base (43) with a 3/8" x 1 3/4" Bolt (14) and a 3/8" Jam Nut (2). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**


Feed the Long Cable (45) over the lower 4 1/2" Pulley (85).

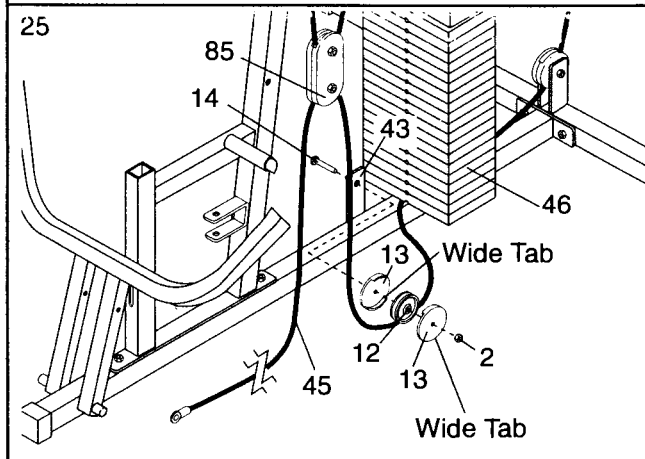


26. Route the Long Cable (45) under a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the indicated side of the Frame (80) with the 3/8" x 4" Bolt (64) and a 3/8" Nylon Locknut (27). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

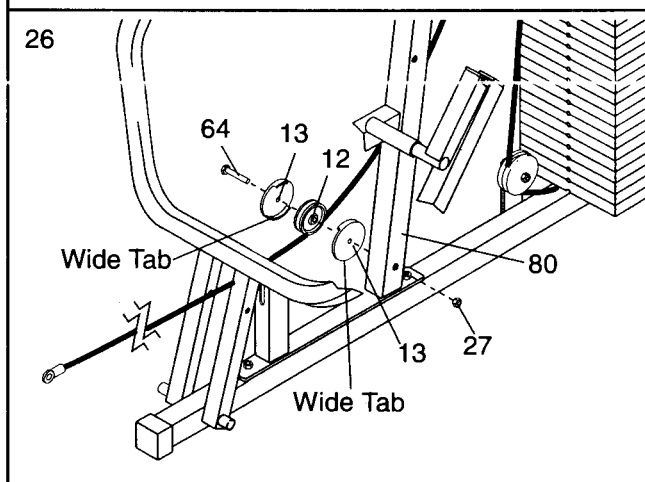


27. Route the Long Cable (45) up around a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the indicated side of the Press Arm (28) with a 3/8" x 3 1/4" Bolt (5) and a 3/8" Jam Nut (2). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

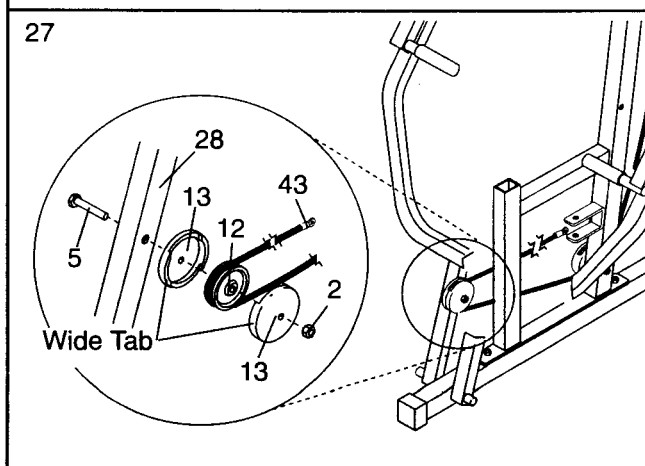

28. Route the Long Cable (45) around the 3 1/2" "V"-Pulley (10). Attach the "V"-Pulley to the bracket on the Frame (80) with a 3/8" x 2 1/2" Bolt (3) and a 3/8" Nylon Locknut (27).

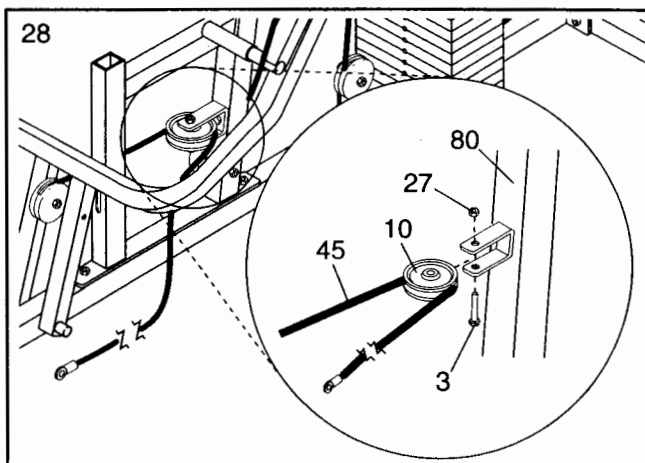


29. Route the Long Cable (45) down around a 3 1/2" Pulley (12). Attach the Pulley and two Pulley Covers (13) to the indicated side of the Press Arm (28) with a 3/8" x 3 1/4" Bolt (5) and a 3/8" Jam Nut (2). **Make sure that the Pulley Covers are turned so the wide tabs are positioned as shown.**

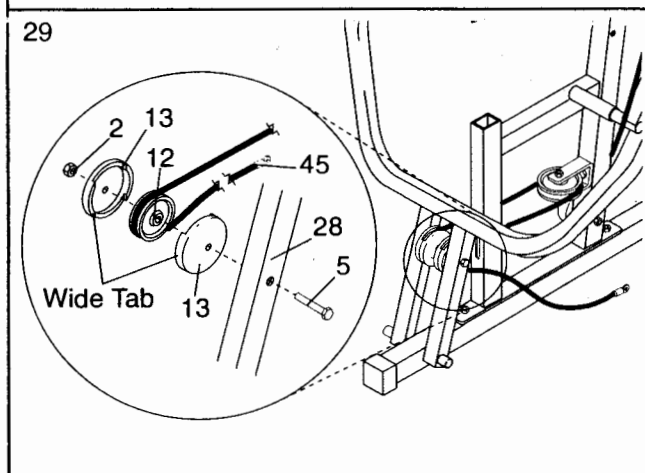

30. Remove the indicated 3/8" Nylon Locknut (27).


Attach the end of the Long Cable (45) to the 3/8" x 4" Bolt (64) in the Frame (80) with the 3/8" Nylon Locknut (27). **Do not overtighten the Nylon Locknut, the Cable must pivot freely.**

IMPORTANT: Before continuing, refer to the **CABLE DIAGRAMS** on pages 22 and 23, and make sure that the Long Cable (45) and Short Cable (not shown) are correctly routed. In addition, refer to **TROUBLE-SHOOTING AND MAINTENANCE** on page 21, and adjust the Cables as described.

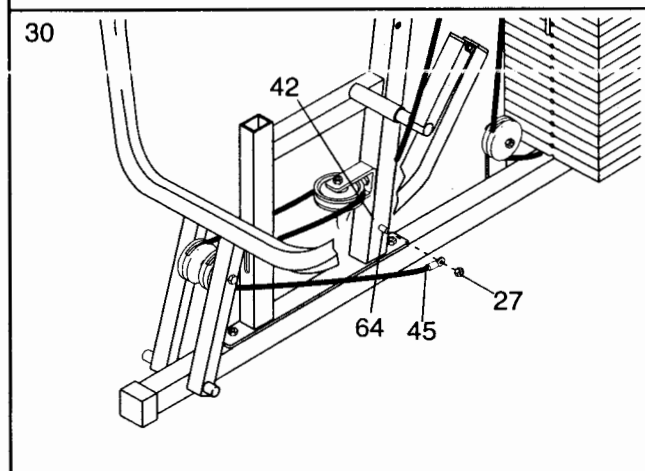


31. Tap a 1 3/4" x 1 3/4" Inner Cap (24) into each of the VKR Arms (73, 74). Tap a 1" Round Cap (22) into each of the handles on the VKR Arms.

Attach the Left and Right VKR Arms (73, 74) to the VKR Upright (70) with two 3/8" x 2 3/4" Bolts (81) and two 3/8" Jam Nuts (2).

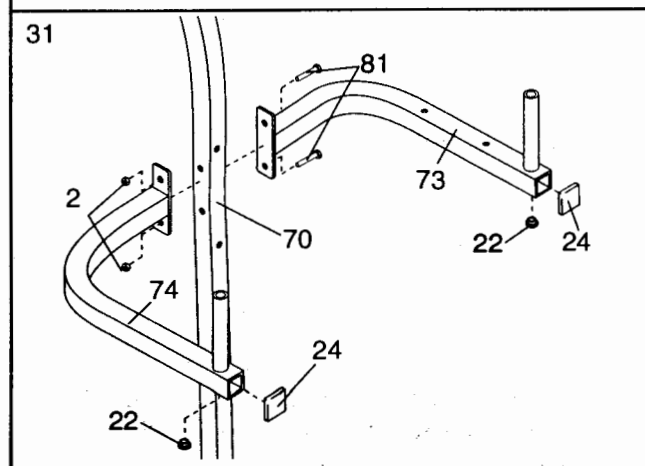


32. Attach a VKR Arm Pad (75) to the Left VKR Arm (73) with two 1/4" x 2 1/2" Screws (41) and two 1/4" Flat Washers (40).


Attach a VKR Arm Pad (75) to the Right VKR Arm (74) in the same manner.

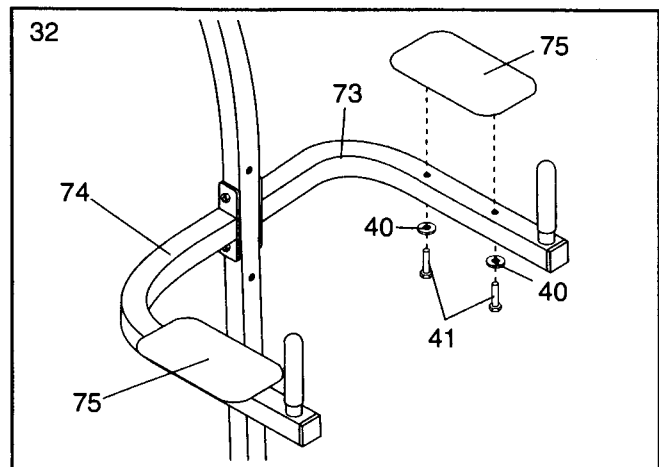

33. Attach the VKR Backrest (76) to the VKR Upright (70) with two 1/4" x 2 1/2" Bolts (94) and two 1/4" Flat Washers (40).

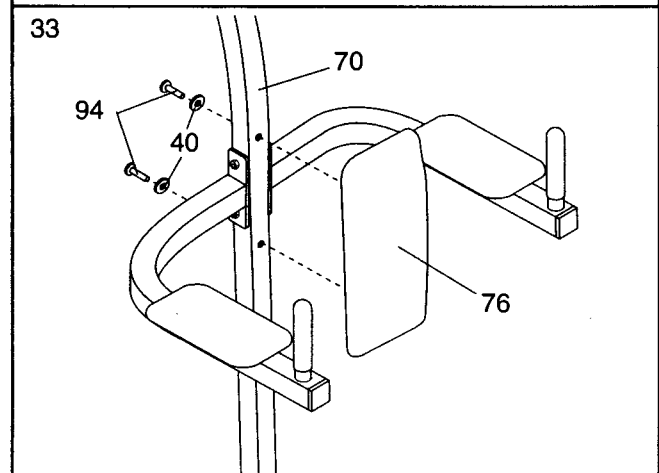

34. Attach a Backrest (39) to the Squat Upright (71) with two 1/4" x 2 1/2" Bolts (94) and two 1/4" Flat Washers (40).

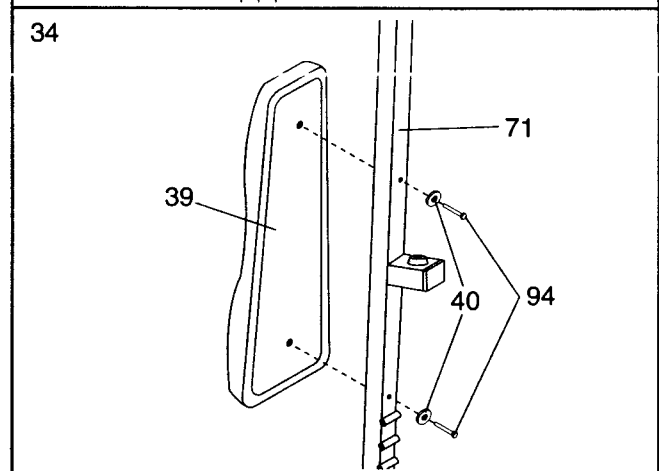


35. Tap a 1 3/4" x 1 3/4" Inner Cap (24) into the Squat Seat Frame (11).

Insert a 1/4" x 2 1/4" Carriage Bolt (66) into the center hole of each Seat Bracket (67).

Attach each Seat Bracket (67) to the Squat Seat (65) with two 1/4" x 1/2" Screws (37).

Attach the Squat Seat (65) to the Squat Seat Frame (11) with the two 1/4" x 2 1/4" Carriage Bolts (66), two 1/4" Flat Washers (40), and two 1/4" Nylon Locknuts (68). **Make sure that the wide end of the Squat Seat is turned as shown.**

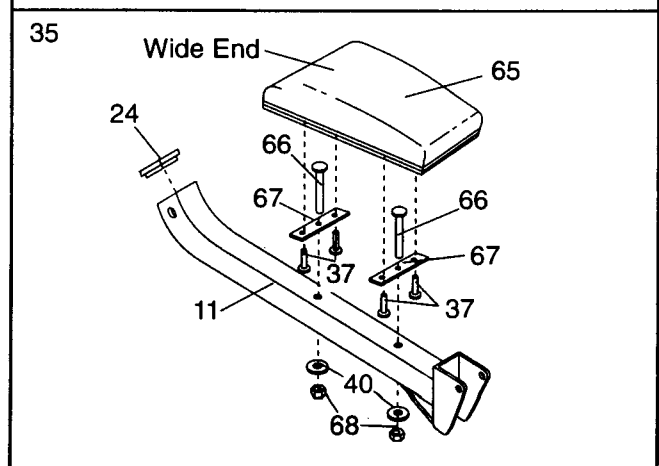


36. Tap a 1 3/4" x 1 3/4" Inner Cap (24) into the Leg Lever (62).

Attach the Leg Lever (62) to the Squat Seat Frame (11) with a 3/8" x 2 1/2" Bolt (3) and a 3/8" Jam Nut (2).


Insert the 3/8" x 4" Eyebolt (55) through the Leg Lever (62) from the indicated side. Attach the Eyebolt with a 3/8" Flat Washer (4) and a 3/8" Jam Nut (2).

36

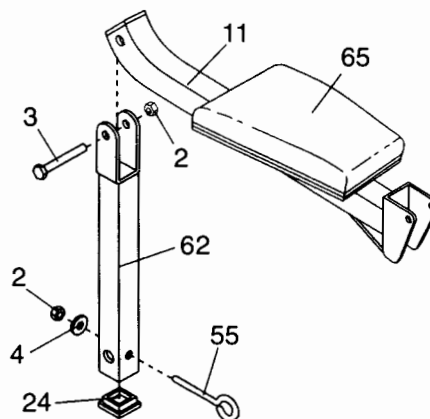

37. Align the holes in the Squat Seat Frame (11) with one of the brackets on the Squat Upright (71). Attach the Squat Seat Frame with a 5/16" x 2 3/4" Carriage Bolt (59) and a 5/16" Knob (61). The Squat Seat can be attached at any of three heights.

37

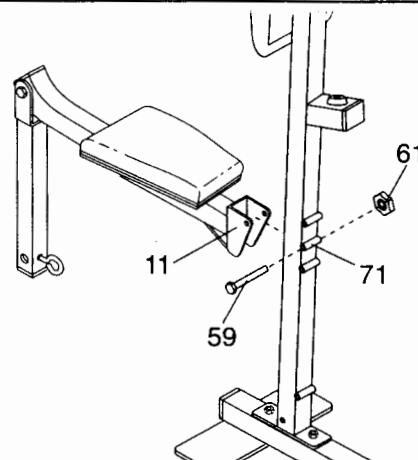


38. Tap 3/4" Round Caps (50) into the ends of both Pad Tubes (58).

Insert the Pad Tubes (58) into the holes in the Leg Lever (62) and the Squat Seat Frame (11).


Slide two 6 1/2" Foam Pads (57) onto each Pad Tube (58).

38

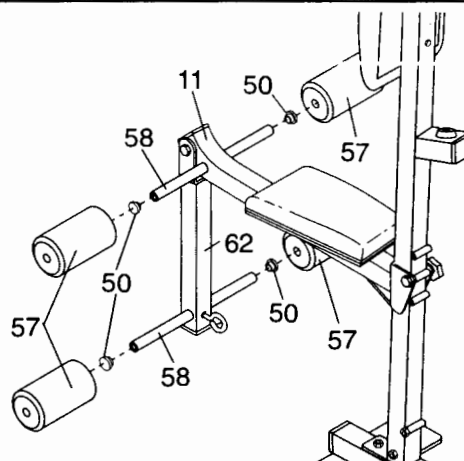


39. Attach the Press Seat (35) to the Press Seat Frame (36) with four 1/4" x 1/2" Screws (37).


39

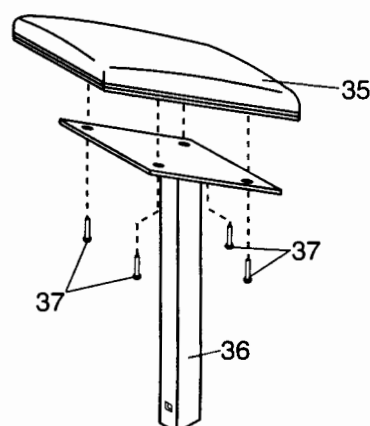


40. Insert the Press Seat Frame (36) into the Frame (80). Attach the Press Seat Frame with a $\frac{3}{8}$ " x $2\frac{1}{4}$ " Carriage Bolt (8) and a $\frac{3}{8}$ " Knob (105). The Press Seat Frame can be attached at any of four heights.

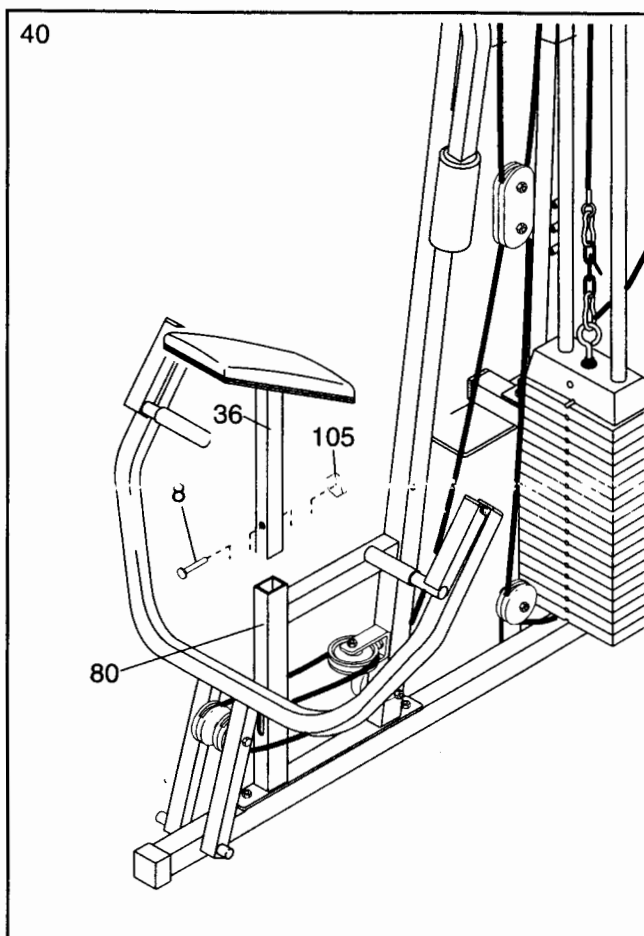


41. Attach a Backrest (39) to the Frame (80) with two $\frac{1}{4}$ " x $2\frac{1}{2}$ " Bolts (94) and two $\frac{1}{4}$ " Flat Washers (40).

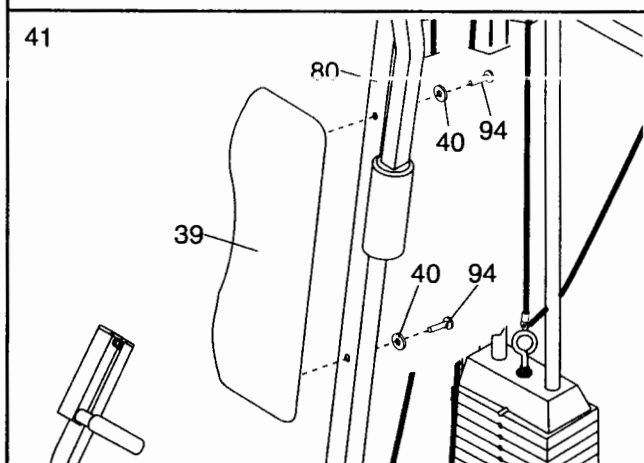

42. Make sure that there are two 5" Grips (25) on the Lat Bar (96). If there are not, wet the ends of the Lat Bar with soapy water, and slide a Grip onto each end.

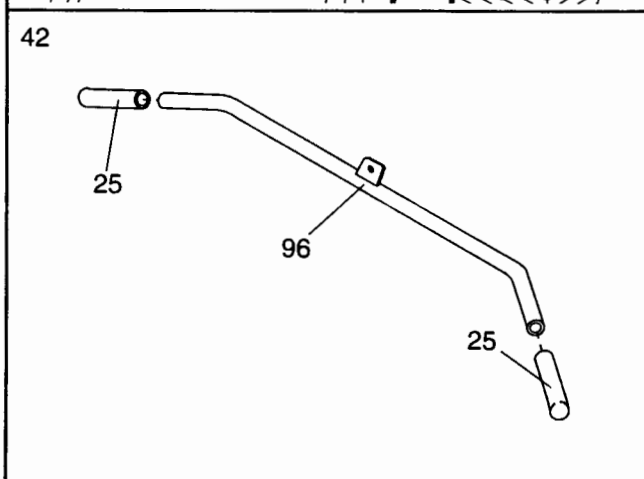

43. Remove the decals from the Decal Sheet (not shown) and apply them to the SYSTEM 300 as shown in the diagram below.

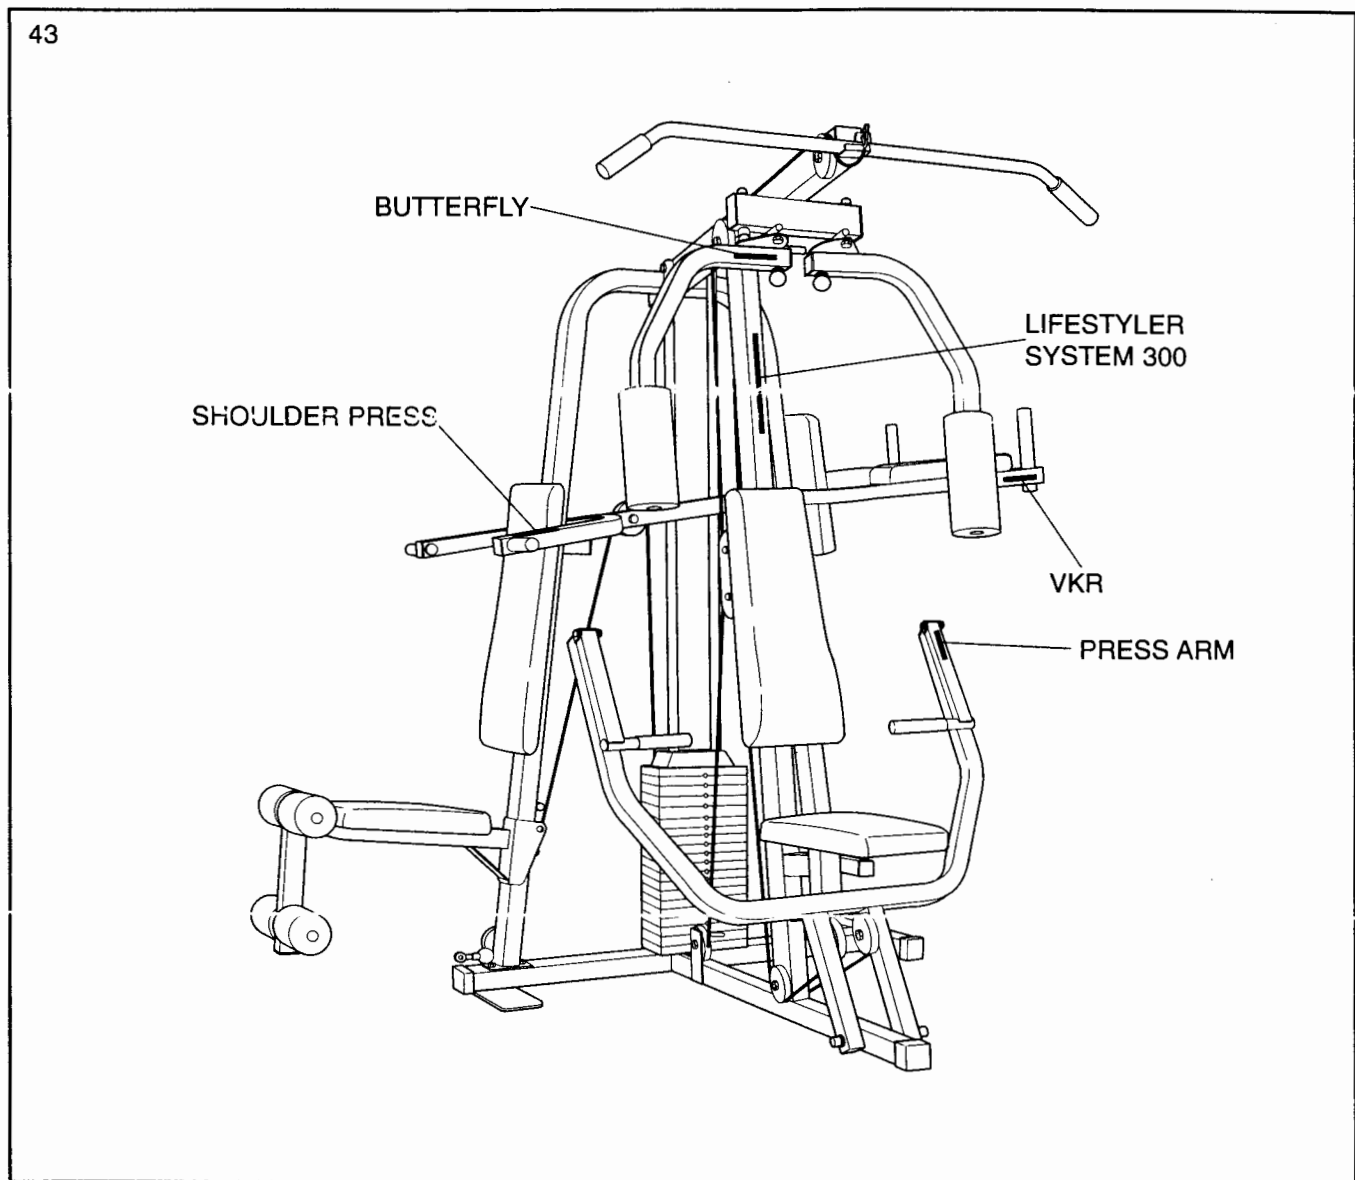

44. Make sure that all parts are correctly assembled and tightened. Use of the remaining parts will be explained in USING THE SYSTEM 300, beginning on page 18 of this owner's manual.

Before using the SYSTEM 300, pull the end of each cable a few times to make sure that the cables move smoothly. If the cables bind, correct the problem before using the SYSTEM 300. See the CABLE DIAGRAMS on pages 22 and 23 of this owner's manual to make sure that the cables are properly routed. **IMPORTANT: If the cables have been incorrectly routed, they will be damaged when heavy weight is used.**


USING THE SYSTEM 300

The instructions below describe how each part of the SYSTEM 300 can be adjusted. Refer to the EXERCISE GUIDE accompanying this owner's manual for exercise guidelines, and to see how the SYSTEM 300 should be set up for each exercise.

IMPORTANT: When attaching the lat bar or nylon strap, make sure that the attachments are in the correct starting position for the exercise to be performed. If there is any slack in the cable or chain as an exercise is performed, the effectiveness of the exercise will be reduced.


SELECTING A WEIGHT SETTING

The weight stack includes twenty 10 pound weights. The weight setting can be changed by inserting the Weight Pin (49) under the desired Weight (46). Make sure to insert the Weight Pin until the bent end is touching the Weights, and turn the bent end downward. The weight setting can be increased from 10 pounds to 200 pounds in increments of 10 pounds. **Note:** Because of the cables and pulleys, the actual amount of resistance at each exercise station may vary from the weight setting. See the WEIGHT RESISTANCE CHART on page 20 of this owner's manual.

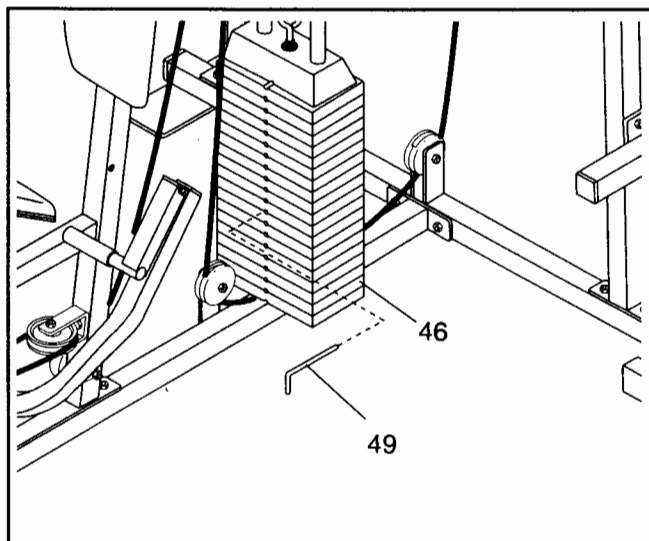

USING THE BUTTERFLY ARMS


If desired, the starting position of the Butterfly Arms (30) can be adjusted. Pull one of the Spring-Loaded Knobs (31), so that the Butterfly Arm can pivot. Release the Knob when the Butterfly Arm is in the desired position. Pivot the Butterfly Arm back and forth slightly to make sure that it is locked in place. Adjust the other Butterfly Arm in the same manner.

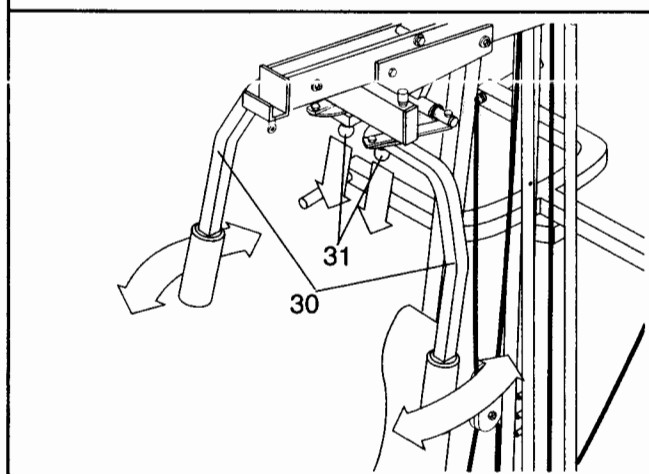

WARNING: When using the Butterfly Arms (30), always apply equal pressure to both Butterfly Arms. Never use only one Butterfly Arm. Doing so could cause permanent damage.

REMOVING AND ATTACHING THE SQUAT SEAT


For some exercises, the Squat Seat (65) must be removed. Make sure that the long chain is not attached to the Leg Lever (62). Remove the 5/16" Knob (61) and the 5/16" x 2 3/4" Carriage Bolt (59). Lift the Squat Seat Frame (11) off the Squat Upright (71).

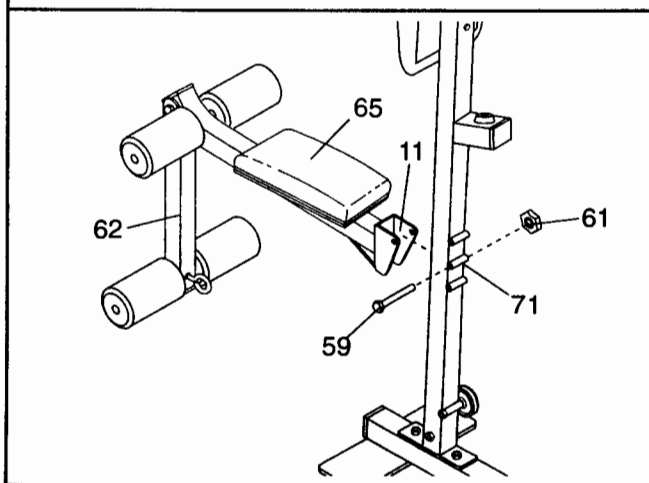

To attach the Squat Seat (65), align the holes in the Squat Seat Frame (11) with one of the brackets on the Squat Upright (71). Attach the Squat Seat Frame with the 5/16" x 2 3/4" Carriage Bolt (59) and the 5/16" Knob (61). The Squat Seat can be attached at any of three heights.

ATTACHING THE LEG LEVER TO THE LOW PULLEY STATION


To use the Leg Lever (62), the Squat Seat (65) must be attached to the Squat Upright (71) (see REMOVING AND ATTACHING THE SQUAT SEAT on page 18). Attach the Long Chain (97) to the Long Cable (45) with a Cable Clip (53). Attach the Long Chain to the Eyebolt (61) with another Cable Clip. Make sure that there is no slack.

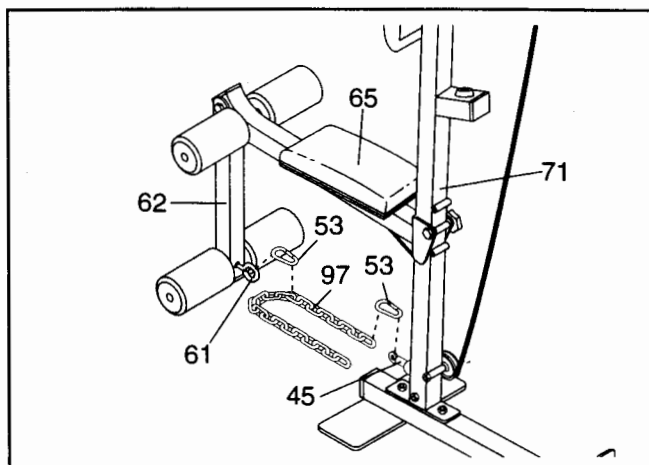

ATTACHING THE LAT BAR OR NYLON STRAP TO THE HIGH PULLEY STATION

Attach the Lat Bar (96) to the Short Cable (44) with a Cable Clip (53). For some exercises, the Long Chain (97) should be attached between the Lat Bar and the Short Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Short Cable so that the Lat Bar is in the correct starting position for the exercise to be performed.**


The Nylon Strap (98) can be attached in the same manner.

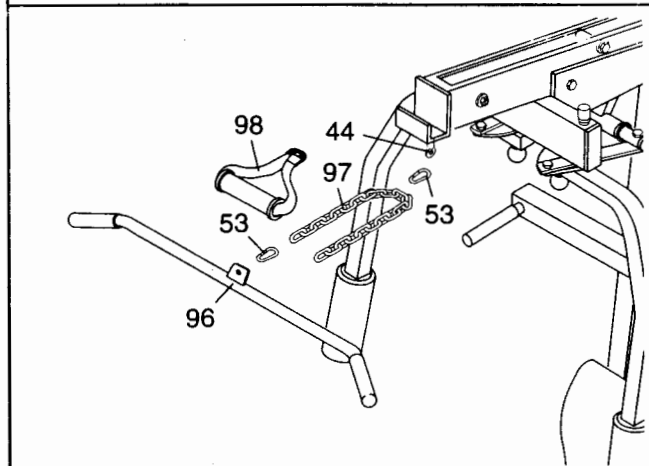

ATTACHING THE LAT BAR OR NYLON STRAP TO THE LOW PULLEY STATION


Attach the Lat Bar (96) to the Long Cable (45) with a Cable Clip (53). For some exercises, the Long Chain (97) should be attached between the Lat Bar and the Long Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Long Cable so that the Lat Bar is in the correct starting position for the exercise to be performed.**

The Nylon Strap (98) can be attached in the same manner.

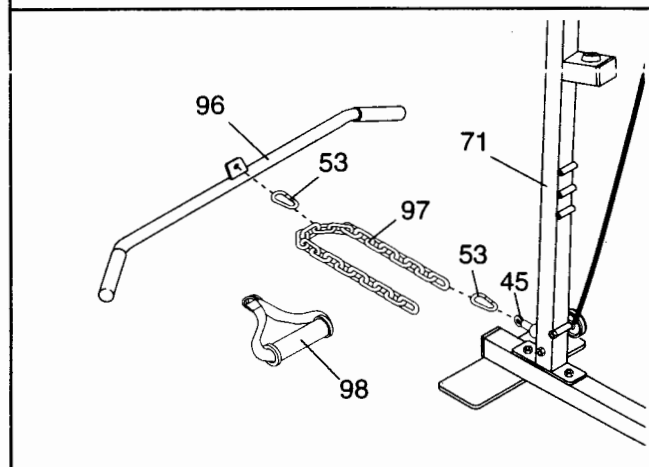

ADJUSTING THE HEIGHT OF THE PRESS SEAT

To adjust the height of the Press Seat (35), remove the 3/8" Knob (105) and the 3/8" x 2 1/4" Carriage Bolt (8). Position the Press Seat at the desired height. Attach the 3/8" x 2 1/4" Carriage Bolt and the 3/8" Knob.

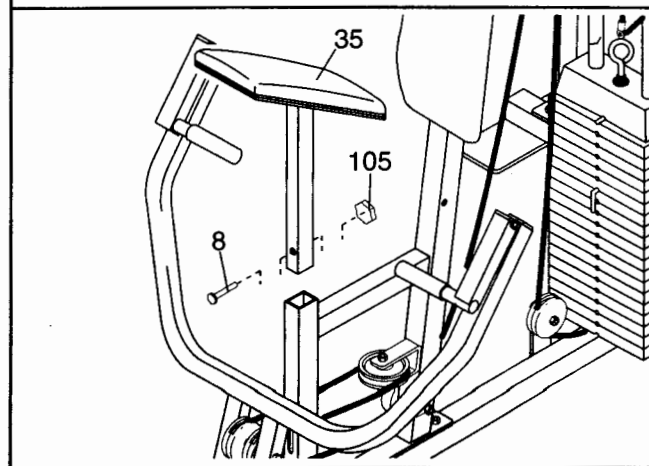

WEIGHT RESISTANCE CHART

ACTUAL WEIGHT	BUTTERFLY ARMS (Lbs.)	HIGH PULLEY STATION (Lbs.)	LOW PULLEY STATION (Lbs.)	SQUAT ARM (Lbs.)	PRESS ARM (Lbs.)
10 lbs.	14	12	17	23	20
20 lbs.	28	22	26	32	32
30 lbs.	38	32	40	40	45
40 lbs.	46	45	50	52	56
50 lbs.	62	56	64	64	70
60 lbs.	67	66	71	74	80
70 lbs.	78	78	85	79	90
80 lbs.	82	90	92	93	102
90 lbs.	105	101	106	103	112
100 lbs.	110	111	119	115	130
110 lbs.	122	122	128	127	140
120 lbs.	135	138	142	130	151
130 lbs.	149	149	151	138	163
140 lbs.	157	159	165	150	173
150 lbs.	169	168	174	167	183
160 lbs.	175	179	182	173	189
170 lbs.	185	184	196	185	202
180 lbs.	DO NOT USE	201	212	194	224
190 lbs.	DO NOT USE	208	220	201	232
200 lbs.	DO NOT USE	224	227	210	245


TROUBLE-SHOOTING AND MAINTENANCE

Inspect and tighten all parts each time you use the SYSTEM 300. Replace all worn parts immediately (see ORDERING REPLACEMENT PARTS on the back cover of this owner's manual). The SYSTEM 300 can be cleaned using a damp cloth and a mild detergent. Do not use solvents or abrasives.

ADJUSTING THE CABLES

If there is too much slack in the cables, they should be tightened. Find the Eyebolt (55) in the Small Weight (103). Loosen the 3/8" Nut (56). Thread the Eyebolt further into the Small Weight, until there is no slack in the cables. Finger tighten the 3/8" Nut (56) against the Small Weight (103).


If the Eyebolt (55) is threaded into the Small Weight (103) as far as possible, and there is still slack in the cables, the Short Chain (52) should be adjusted. Open the indicated Cable Clip (53) and slide the next link of the Short Chain (52) onto the Cable Clip. Adjust the Eyebolt as described above. When the cables are properly adjusted, there should be no slack in the cables, and the Small Weight (103) should be resting on the Weight (46) below it.

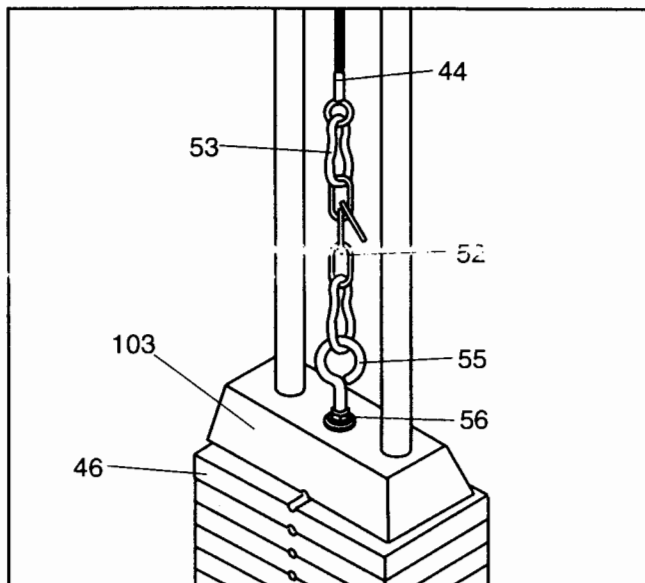


CABLE DIAGRAMS

The cable diagrams below and on page 23 show the proper routing of the Short Cable (44) and the Long Cable (45). Use the diagrams to make sure that the two Cables are routed correctly.

SHORT CABLE (44) ROUTING

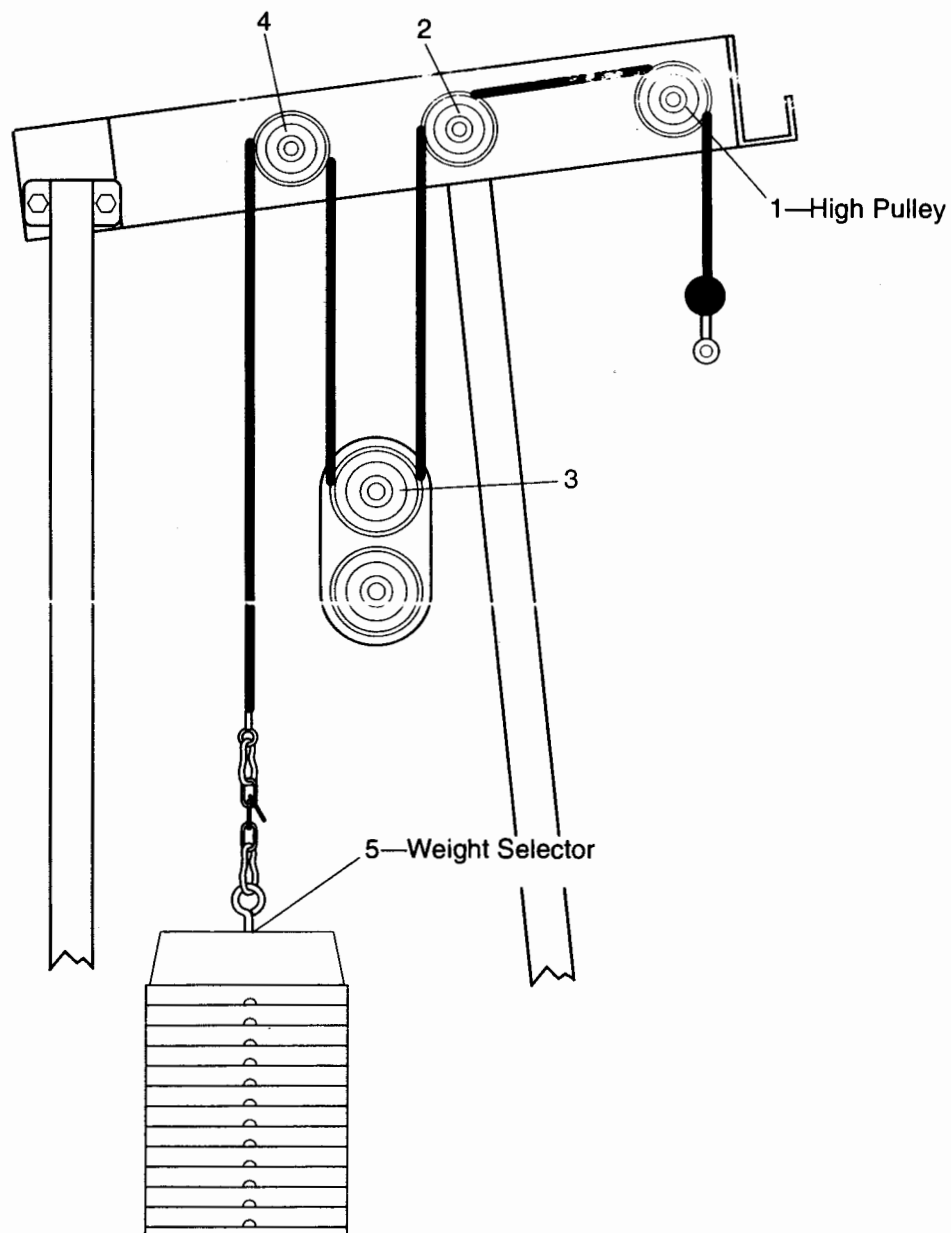

LONG CABLE (45) ROUTING

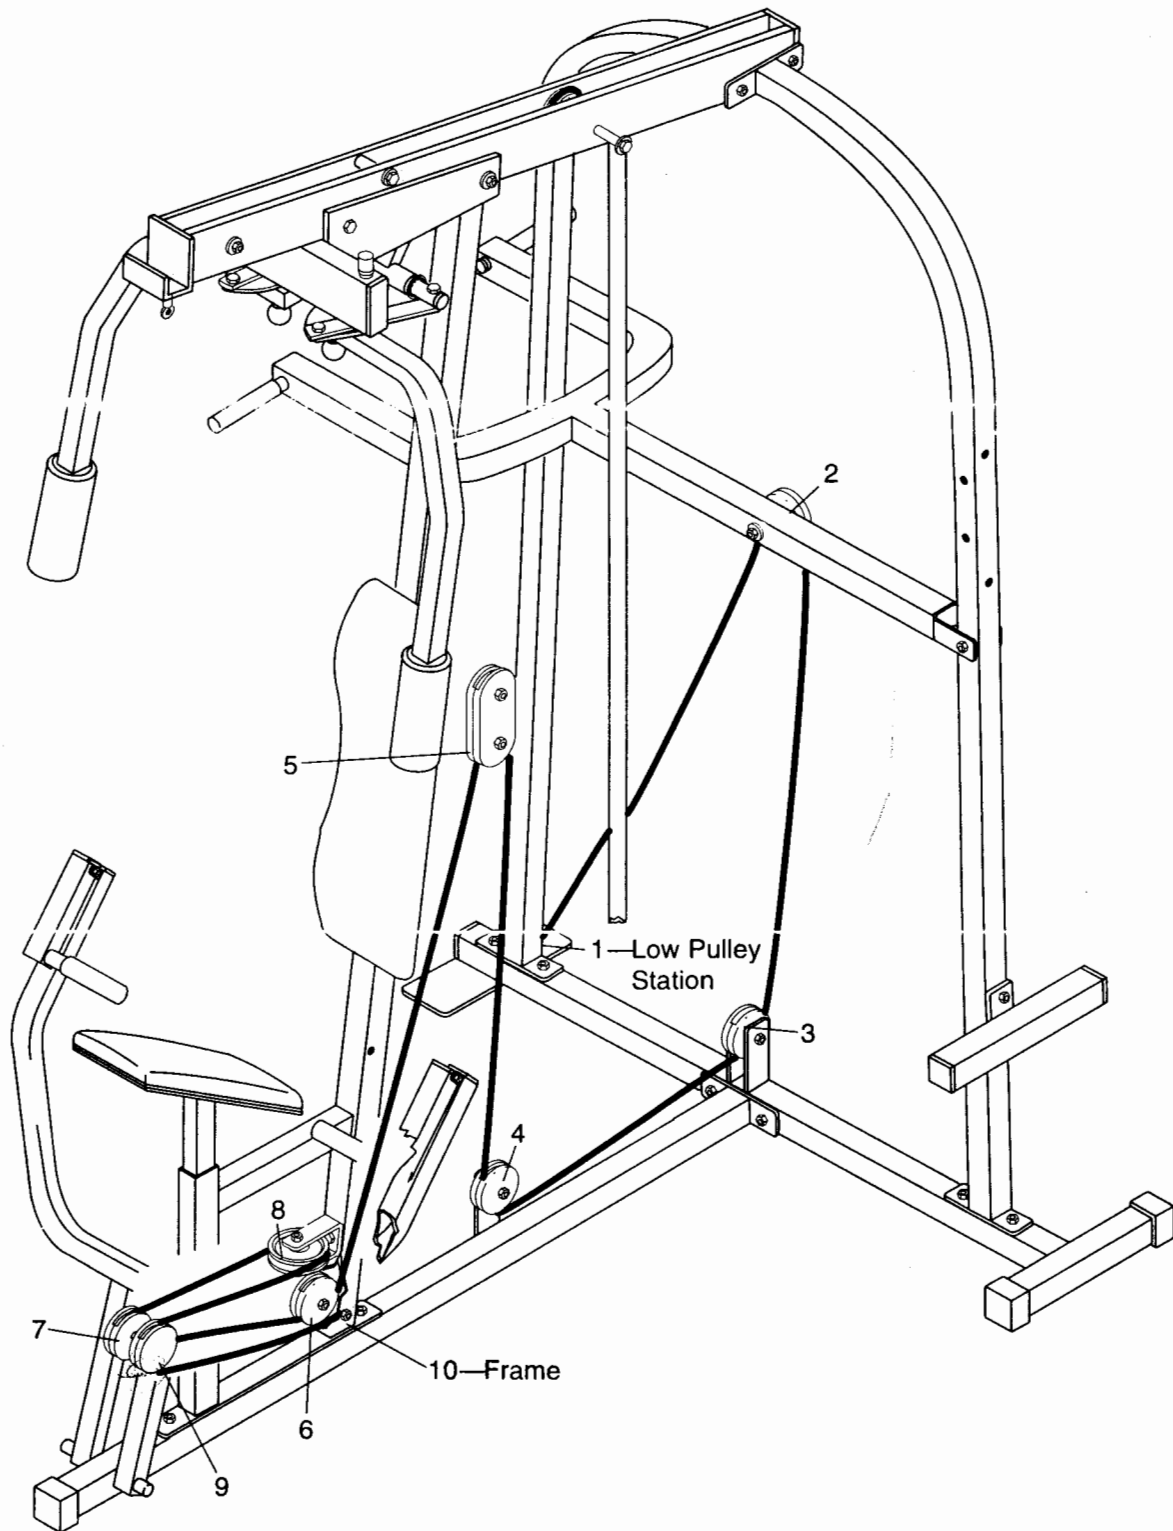

ORDERING REPLACEMENT PARTS

Each SYSTEM 300 has its own MODEL NUMBER. Always mention this MODEL NUMBER when requesting service or repair parts for your SYSTEM 300.

All parts listed herein can be ordered through SEARS, ROEBUCK AND CO. SERVICE CENTERS and most SEARS RETAIL STORES. If parts you need are not stocked locally, your order will be transmitted to a SEARS PARTS DISTRIBUTION CENTER for handling.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

1. The MODEL NUMBER of the product (831.159421).
2. The NAME of the product (LIFESTYLER® SYSTEM 300 Weight System).
3. The PART NUMBER and DESCRIPTION of the part(s), from the PARTS LIST/EXPLODED DRAWING accompanying this owner's manual.

Your SYSTEM 300 has added value when you consider that SEARS has service units nationwide, staffed with SEARS trained technicians specifically trained on SEARS products, having the parts, tools and equipment to ensure that we meet our pledge to you: "We service what we sell."

Should you ever need repair service or parts, call toll free:

For repair service: **1-800-4-REPAIR** (1-800-473-7247)

For repair parts: **1-800-FON-PART** (1-800-366-7278)

FULL 90 DAY WARRANTY

For 90 days from the date of purchase, when proper assembly and maintenance procedures detailed in the Owner's Manual are followed, SEARS will, free of charge, repair or replace and install a replacement part for any defective part, when the SYSTEM 300 is used in a normal manner.

This warranty does not apply when the SYSTEM 300 is used for commercial or rental purposes.


SERVICE IS AVAILABLE SIMPLY BY CONTACTING YOUR NEAREST SEARS SERVICE CENTER/DEPARTMENT IN THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**SEARS, ROEBUCK AND CO., DEPT. 817WA,
HOFFMAN ESTATES, IL 60179**

REMOVE THIS PART IDENTIFICATION CHART FROM THE MANUAL!

This chart is provided to help you identify the small parts used in assembly. Note: Some parts may have been pre-assembled for shipping purposes; if you cannot find a part in the parts bags, check the frame to see if it has been pre-assembled.

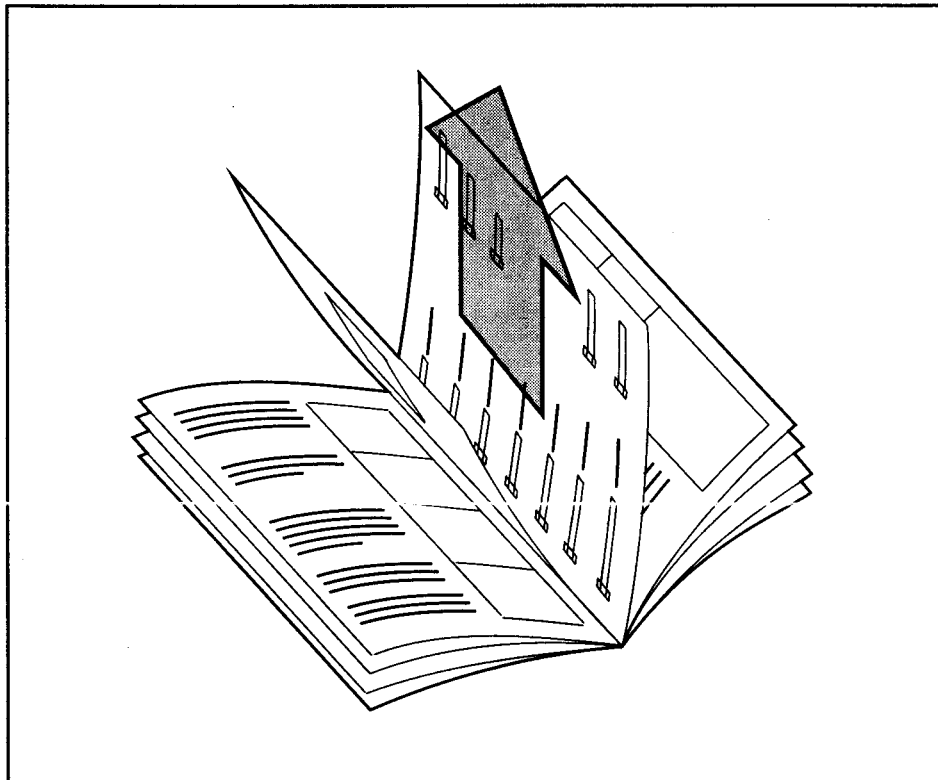

PART IDENTIFICATION CHART—Model No. 831.159421

R1194B


This chart is provided to help identify the small parts used in assembly. Some parts have been pre-assembled for shipping purposes; if a part cannot be found in the parts bags, check the system frame to see if it has been pre-assembled. The number in parenthesis below each part refers to the key number of the part. The second number refers to the quantity used in assembly. This side of the chart shows all of the nuts, washers, screws and bolts used in assembly. See the opposite side of this chart for all other parts.



1/4" Nylon Locknut (68)–4



#8 x 1/2" Tap Screw (21)–2




1/4" x 1/2" Screw (37)–8



3/8" Nylon Locknut (27)–3




5/16" Jam Nut (106)–1




3/8" x 1" Bolt (6)–2




3/8" Jam Nut (2)–33




1/4" x 1 1/4" Bolt (93)–2

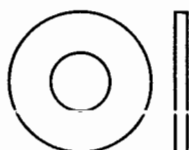


1/4" Flat Washer (40)–12




3/8" x 1 3/4" Bolt (14)–2

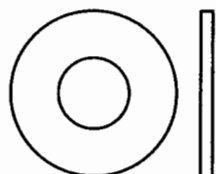


5/16" Flat Washer (60)–4




1/4" x 2 1/4" Carriage Bolt (66)–2

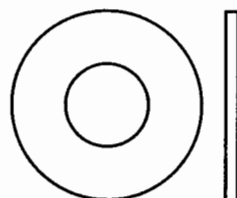


3/8" Flat Washer (4)–11




1/4" x 2 1/2" Screw (41)–4

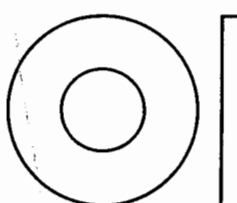


3/8" Plastic Washer (34)–2




3/8" x 2 1/2" Bolt (3)–7

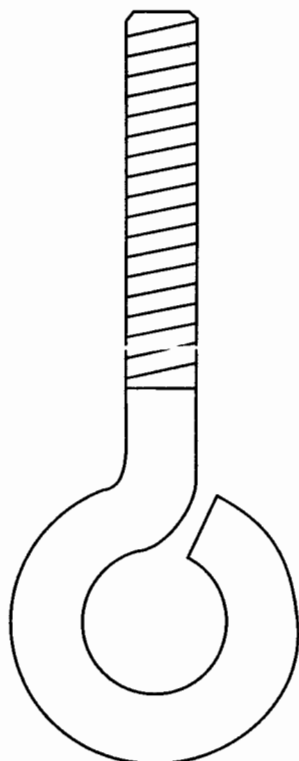


3/8" x 2" Eyebolt (55)–2




3/8" x 2" Bolt (38)-1

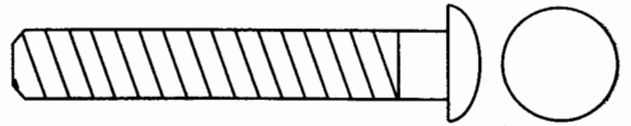


3/8" x 2 1/4" Carriage Bolt (8)-1

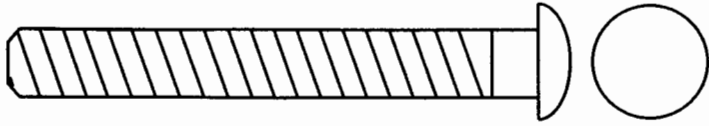


3/8" x 2 3/4" Carriage Bolt (1)-6




3/8" x 2 3/4" Bolt (81)-5

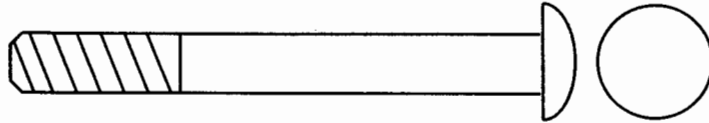


5/16" x 2 3/4" Carriage Bolt (59)-1




3/8" x 3" Bolt (7)-2




1/4" x 2 1/2" Bolt (94)-6




3/8" x 3 1/4" Bolt (5)-5




3/8" x 3 1/2" Bolt (82)-1




3/8" x 3 3/4" Bolt (83)-3



3/8" x 4" Bolt (64)-1




3/8" x 4 1/2" Bolt (90)-1



5/16" x 6 1/2" Bolt (79)-1



5/8" x 3/8" Spacer (99)-2

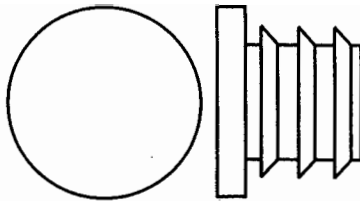


1" Round Cap (22)-6




1" x 1 1/2" Inner Cap (23)-2




1/2" x 3/4" Spacer (100)-2

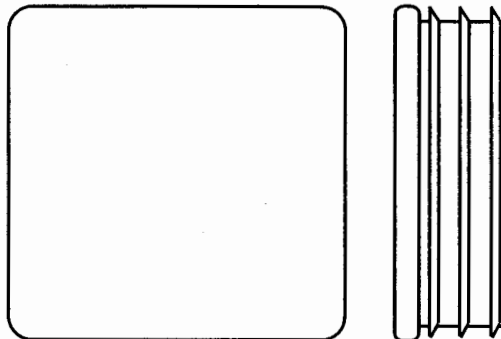


1 3/4" x 1 3/4" Inner Cap (24)-12

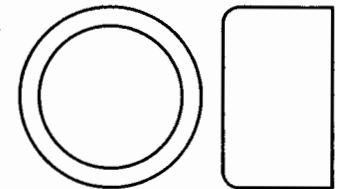


3/4" Retainer Cap (19)-4




1/2" x 1 1/4" Spacer (84)-1

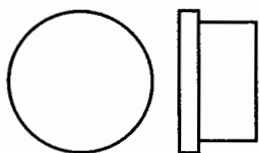


3/4" Round Cap (50)-4

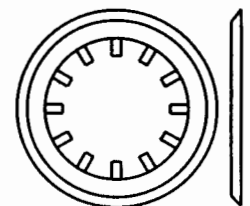


3/4" Retainer (17)-6

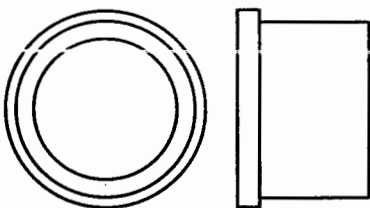


3/4" Flange Bushing (18)-10

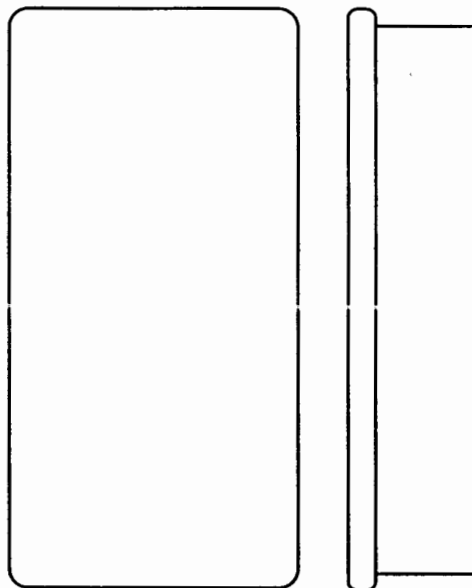


1 1/2" x 3" Inner Cap (101)-2

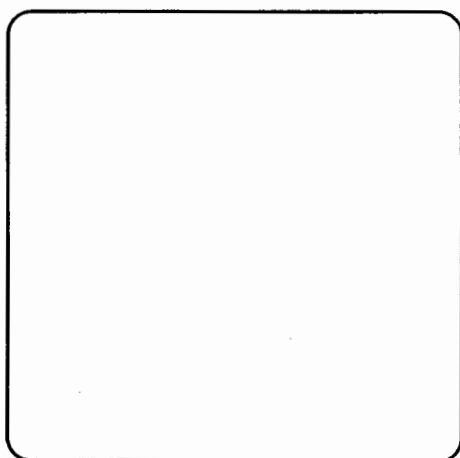


2" Outer Cap (15)-3

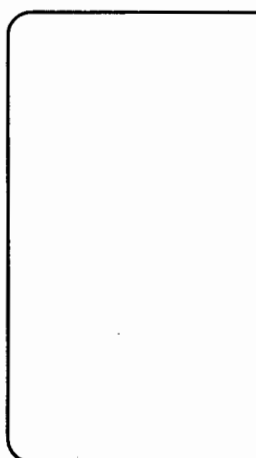


2" x 2" Inner Cap (78)-4

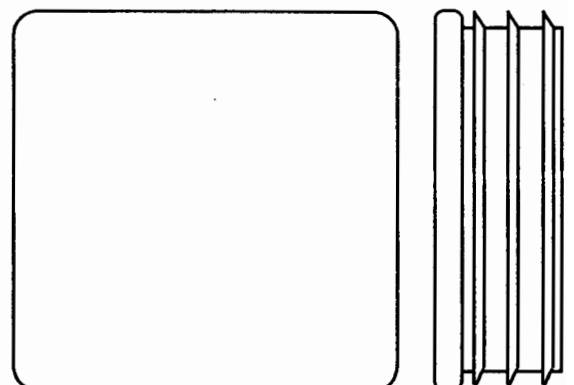

**REMOVE THIS PART LIST AND
EXPLODED DRAWING FROM
THE MANUAL!**

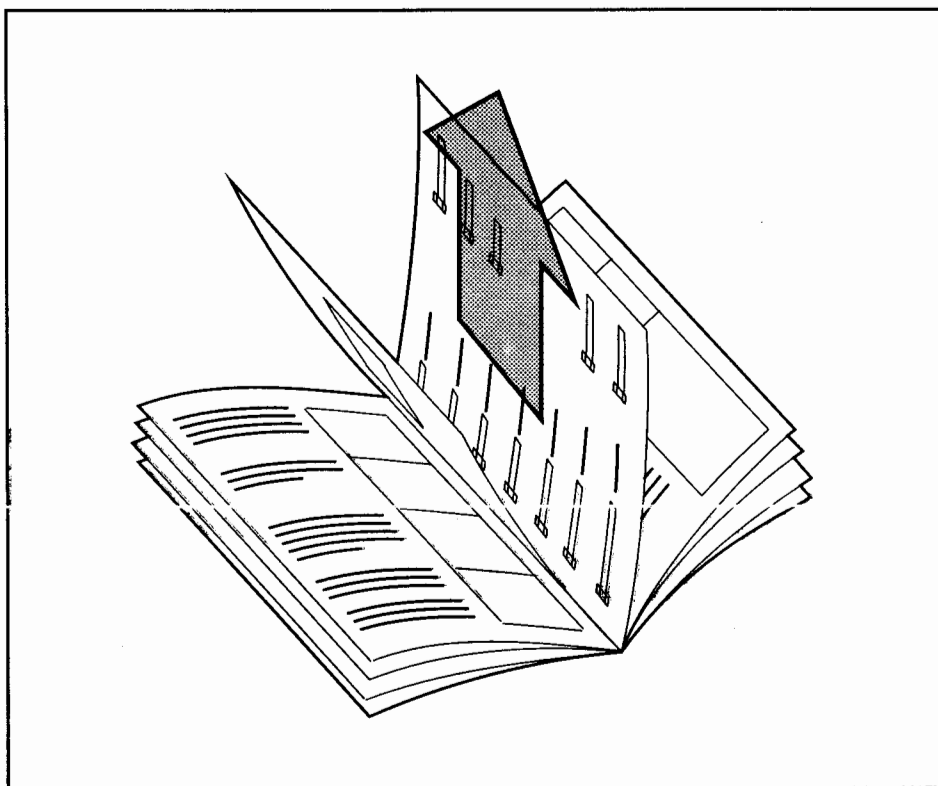

R1194B

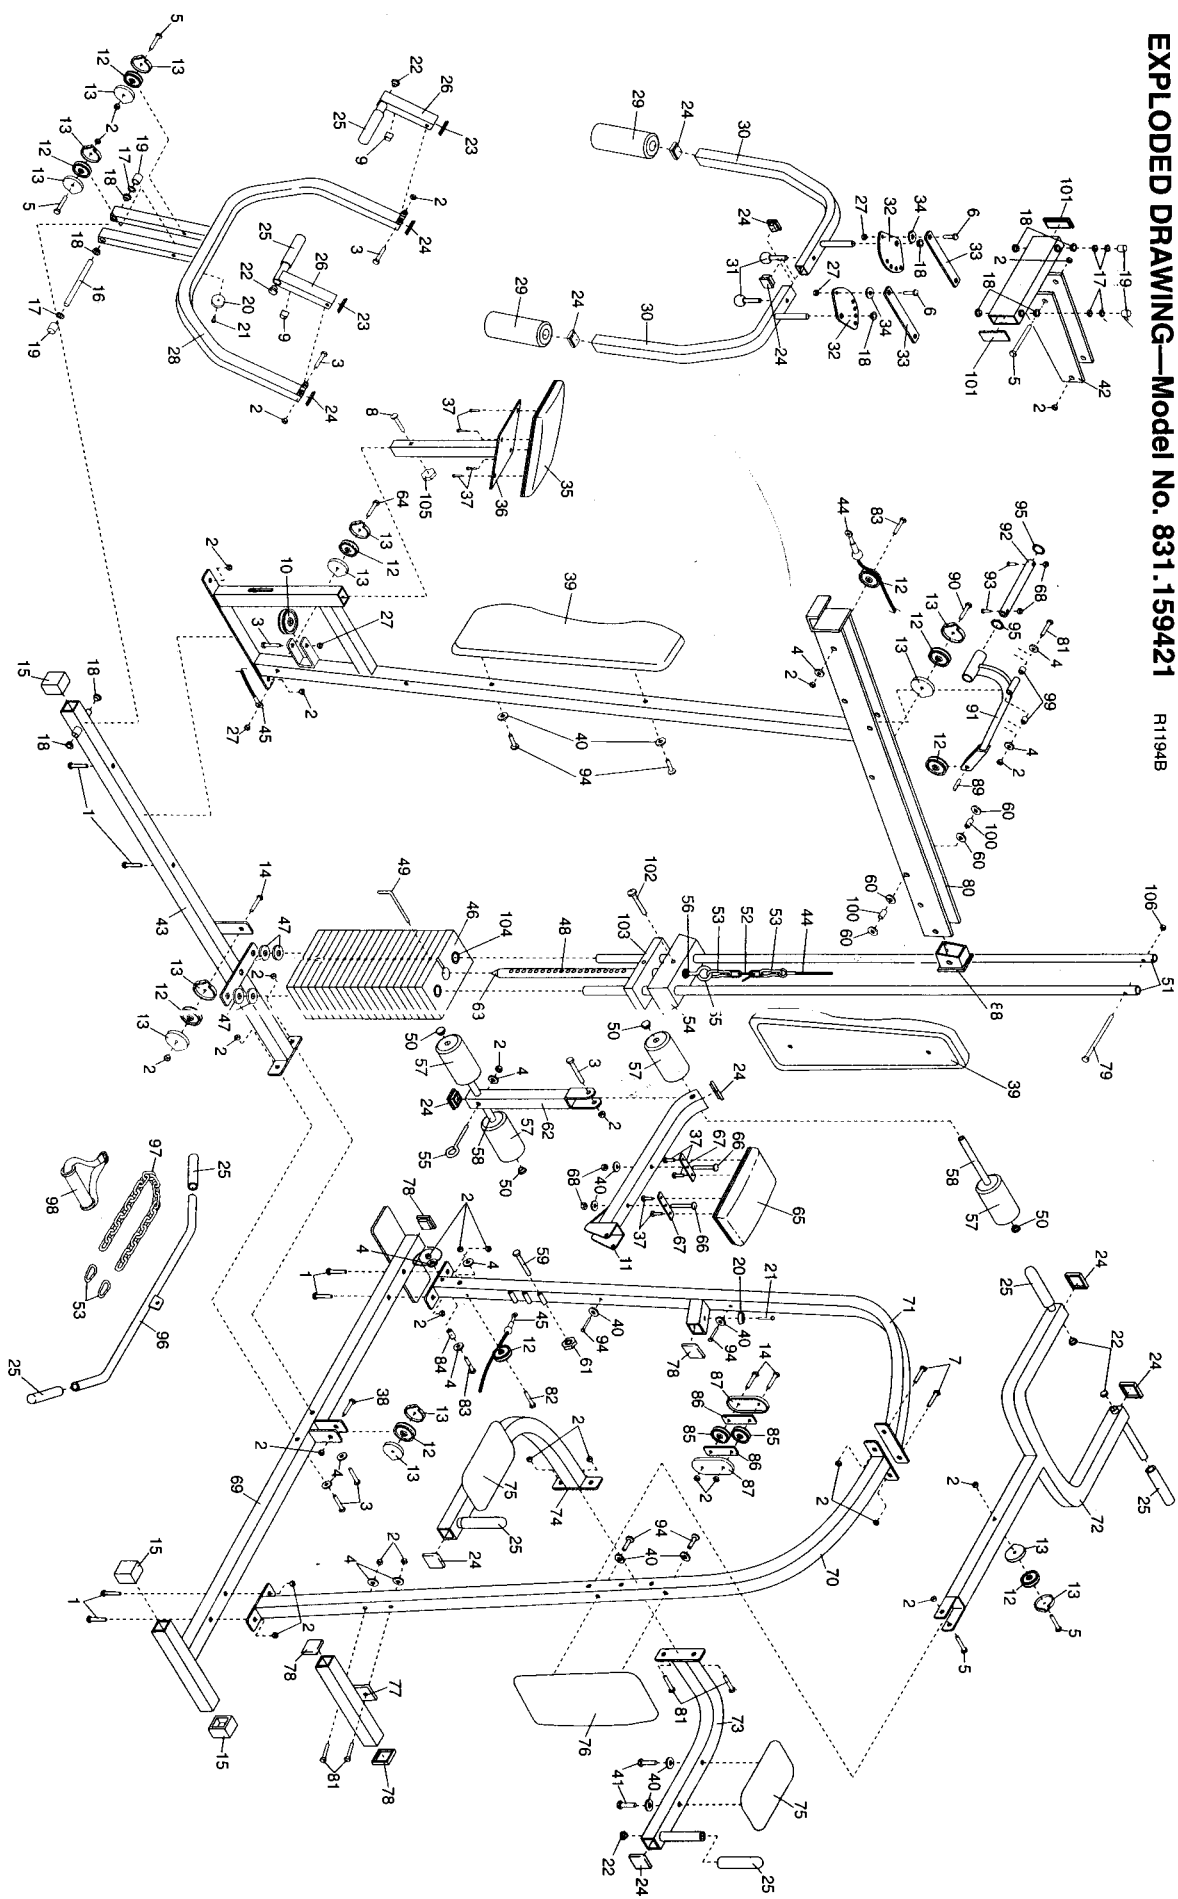

PART LIST—Model No. 831.159421

R1194B

Key No.	Part No.	Qty.	Description	Key No.	Part No.	Qty.	Description
1	122548	6	3/8" x 2 3/4" Carriage Bolt	55	121565	2	3/8" Eyebolt
2	119425	33	3/8" Jam Nut	56	112004	1	3/8" Nut
3	013581	7	3/8" x 2 1/2" Bolt	57	120597	4	6 1/2" Foam Pad
4	014132	11	3/8" Flat Washer	58	120586	2	Pad Tube
5	118796	5	3/8" x 3 1/4" Bolt	59	123385	1	5/16" x 2 3/4" Carriage Bolt
6	013547	2	3/8" x 1" Bolt	60	102372	4	5/16" Flat Washer
7	112001	2	3/8" x 3" Bolt	61	122588	2	5/16" Knob
8	121568	1	3/8" x 2 1/4" Carriage Bolt	62	119195	1	Leg Lever
9	019115	2	Square Bumper	63	040119	1	1" Weight Selector Endcap
10	115164	1	3 1/2" "V" Pulley	64	013430	1	3/8" x 4" Bolt
11	121507	1	Squat Seat Frame	65	121549	1	Squat Seat
12	115370	10	3 1/2" Pulley	66	121567	2	1/4" x 2 1/4" Carriage Bolt
13	120678	14	Pulley Cover	67	121578	2	Seat Bracket
14	013399	2	3/8" x 1 3/4" Bolt	68	012139	4	1/4" Nylon Locknut
15	120822	3	2" Outer Cap	69	121559	1	Stabilizer
16	122565	1	3/4" x 8 1/2" Axle	70	121498	1	VKR Upright
17	101578	6	3/4" Retainer	71	121499	1	Squat Upright
18	122564	10	3/4" Flange Bushing	72	121554	1	Squat Arm
19	122566	4	3/4" Retainer Cap	73	121555	1	Left VKR Arm
20	122733	2	Rubber Bumper	74	121556	1	Right VKR Arm
21	121401	2	#8 x 1/2" Tap Screw	75	122560	2	VKR Arm Pad
22	120733	6	1" Round Cap	76	121550	1	VKR Backrest
23	123309	2	1" x 1 1/2" Inner Cap	77	122561	1	Foot Rest
24	113666	12	1 3/4" x 1 3/4" Inner Cap	78	120720	4	2" x 2" Inner Cap
25	120602	8	5" Grip	79	122557	1	5/16" x 6 1/2" Bolt
26	123364	2	Handle	80	NSP	1	Frame
27	012149	4	3/8" Nylon Locknut	81	118640	5	3/8" x 2 3/4" Bolt
28	123333	1	Press Arm	82	120003	1	3/8" x 3 1/2" Bolt
29	120596	2	9 1/2" Foam Pad	83	118471	3	3/8" x 3 3/4" Bolt
30	121500	2	Butterfly Arm	84	122572	1	1/2" x 1 1/4" Spacer
31	121569	2	Spring Loaded Knob	85	115348	2	4 1/2" Pulley
32	122550	2	Adjustment Bracket	86	121583	2	"I" Plate
33	121551	2	Link Arm	87	121571	2	4 1/2" Pulley Cover
34	121906	2	3/8" Plastic Washer	88	121573	1	Frame Endcap
35	122551	1	Press Seat	89	122583	1	3/8" Roll Pin
36	121557	1	Press Seat Frame	90	013485	1	3/8" x 4 1/2" Bolt
37	123148	8	1/4" x 1/2" Screw	91	120591	1	Pivot Arm
38	013601	1	3/8" x 2" Bolt	92	121553	1	Pivot Arm Tube
39	121581	2	Backrest	93	121420	2	1/4" x 1 1/4" Bolt
40	014063	12	1/4" Flat Washer	94	116185	2	1/4" x 2 1/2" Bolt
41	122925	4	1/4" x 2 1/2" Screw	95	102603	2	5/8" Retainer
42	122553	1	Butterfly Arm Frame	96	120719	1	Lat Bar
43	121464	1	Base	97	116869	1	Chain
44	121589	1	Short Cable	98	115177	1	Nylon Strap
45	121590	1	Long Cable	99	122584	2	5/8" x 3/8" Spacer
46	121591	19	Weight	100	122585	2	1/2" x 3/4" Spacer
47	121580	4	Weight Bumper	101	121579	2	1 1/2" x 3" Inner Cap
48	122554	1	Weight Selector	102	013365	1	3/8" x 1 1/2" Button Head Bolt
49	123149	1	Weight Pin	103	122586	1	Small Weight
50	119170	4	3/4" Round Cap	104	109976	38	Weight Bushing
51	121548	2	Weight Guide	105	121570	1	3/8" Knob
52	122568	1	Short Chain	#	122425	1	Owner's Manual
53	103087	5	Cable Clip	#	122428	1	Exercise Guide
54	122556	1	Small Weight Cover	#	122432	1	Decal Sheet